



See the possibilities

User Manual

AM-201CL

AB-201CL

*2MP Digital Progressive Scan
Monochrome and Color Camera*

Document Version: ver.1.5
AMAB-201CL_Ver.1.5_Oct2013

Notice

The material contained in this manual consists of information that is proprietary to JAI Ltd., Japan and may only be used by the purchasers of the product. JAI Ltd., Japan makes no warranty for the use of its product and assumes no responsibility for any errors which may appear or for damages resulting from the use of the information contained herein. JAI Ltd., Japan reserves the right to make changes without notice.

Company and product names mentioned in this manual are trademarks or registered trademarks of their respective owners.

Warranty

For information about the warranty, please contact your factory representative.

Certifications

CE compliance

As defined by the Directive 2004/108/EC of the European Parliament and of the Council, EMC (Electromagnetic compatibility), JAI Ltd., Japan declares that AM-201CL, and AB-201CL comply with the following provisions applying to its standards.

EN 61000-6-3 (Generic emission standard part 1)

EN 61000-6-2 (Generic immunity standard part 1)

FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning

Changes or modifications to this unit not expressly approved by the party responsible for FCC compliance could void the user's authority to operate the equipment.

Supplement

The following statement is related to the regulation on “ Measures for the Administration of the control of Pollution by Electronic Information Products ” , known as “ China RoHS ” . The table shows contained Hazardous Substances in this camera.

 mark shows that the environment-friendly use period of contained Hazardous Substances is 15 years.

重要注意事项

有毒，有害物质或元素名称及含量表

根据中华人民共和国信息产业部『电子信息产品污染控制管理办法』，本产品《有毒，有害物质或元素名称及含量表》如下。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PPB)	多溴二苯醚 (PBDE)
螺丝固定座	×	○	○	○	○	○
连接插头	×	○	○	○	○	○
电路板	×	○	○	○	○	○
.....

○：表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006规定的限量要求以下。
 ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006规定的限量要求。
 (企业可在此处、根据实际情况对上表中打“×”的技术原因进行进一步说明。)




环保使用期限

电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变、电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对基人身、财产造成严重损害的期限。

数字「15」为期限15年。

Supplement

The following statement is related to the regulation on “ Measures for the Administration of the control of Pollution by Electronic Information Products ” , known as “ China RoHS ” . The table shows contained Hazardous Substances in this camera.

 mark shows that the environment-friendly use period of contained Hazardous Substances is 15 years.

重要注意事项

有毒，有害物质或元素名称及含量表

根据中华人民共和国信息产业部『电子信息产品污染控制管理办法』，本产品《有毒，有害物质或元素名称及含量表》如下。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PPB)	多溴二苯醚 (PBDE)
螺丝固定座	×	○	○	○	○	○
光学滤色镜	×	○	×	○	○	○
连接插头	×	○	○	○	○	○
电路板	×	○	○	○	○	○
.....

○：表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006规定的限量要求以下。
 ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006规定的限量要求。
 (企业可在此处、根据实际情况对上表中打“×”的技术原因进行进一步说明。)



环保使用期限

电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变、电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对基人身、财产造成严重损害的期限。

数字「15」为期限15年。

- Contents -

Before using AM-201CL and AB-201CL	- 6 -
1. General	- 7 -
2. Camera nomenclature	- 8 -
3. Main features.....	- 8 -
4. Locations and functions	- 9 -
4.1 Locations and functions	- 9 -
4.2 Rear panel	- 10 -
5. Input and output	- 11 -
5.1 Connectors and pin assignment	- 11 -
5.1.1 Hirose 12Pin connector	- 11 -
5.1.1.1 Figure	- 11 -
5.1.1.2 Pin assignment.....	- 11 -
5.1.2 Camera Link connector.....	- 11 -
5.1.2.1 Figure	- 11 -
5.1.2.2 Pin assignment.....	- 12 -
5.1.3 DIP switch SW500.....	- 12 -
5.2 Camera Link interface	- 13 -
5.3 Interface circuits	- 13 -
5.3.1 Iris video output	- 13 -
5.3.2 Trigger input.....	- 14 -
5.3.3 XEEN output	- 14 -
5.4 Output.....	- 15 -
5.4.1 Digital output	- 15 -
5.4.1.1 Bit allocation.....	- 15 -
5.4.1.2 Camera link output (2 tap output)	- 15 -
5.4.2.3 Camera link output (1 tap output)	- 16 -
5.4.2 Partial scan readout (AOI) (Commands: STL, ETL)	- 16 -
5.4.2.1 Frame rate calculation if AOI is set.....	- 17 -
5.4.2.2 2 tap output	- 17 -
5.4.2.2a Binning OFF	- 17 -
5.4.2.2b Binning ON	- 18 -
5.4.2.3 1 tap output.....	- 18 -
5.4.2.3a Binning OFF	- 18 -
5.4.2.3b Binning ON	- 18 -
5.4.2.4 Setting example 1	- 19 -
5.4.2.5 Setting example 2	- 19 -
5.4.2.6 Setting example 3	- 20 -
5.4.2.7 Setting example 4.....	- 20 -
5.4.3 Binning (Command: BNC) (Only for AM-201CL)	- 20 -
5.4.4 Bayer output pattern	- 21 -
6. Sensor layout and timing.....	- 21 -
6.1 Sensor layout	- 21 -
6.2. Vertical timing (2 tap output)	- 21 -
6.2.1 If the binning control is BNC=0(OFF) or BNC=2(2x1)	- 21 -
6.2.1.1 AOI default setting (Offset=0, Height=1080).....	- 21 -
6.2.1.2 AOI setting.....	- 22 -
6.2.2 If the binning control is BNC=1(1x2) or BNC=3(2x2)	- 23 -
6.2.2.1 AOI initial setting (Offset=0, Height=1080)	- 23 -
6.2.2.2 AOI setting.....	- 23 -
6.3. Vertical timing (1 tap output)	- 24 -

6.3.1	If the binning control is 0=OFF or 2=2x1.....	- 24 -
6.3.1.1	AOI initial setting	- 24 -
6.3.1.2	AOI setting	- 24 -
6.3.2	If the binning control is set to 1=1x2 or 3=2x2.....	- 25 -
6.3.2.1	AOI initial set (Offset Y=0, Height=1080)	- 25 -
6.3.2.2	AOI setting	- 25 -
6.4.	Horizontal timing.....	- 26 -
6.4.1	If the binning control is 0=OFF or 2=2x1.....	- 26 -
6.4.2	If the binning control is 1=1x2 or 3=2x2	- 26 -
6.4.3	DVAL output if the Binning control is set to 2=2x1 or 3=2x2	- 26 -
6.4.4	LVAL-LOW level period	- 27 -
7.	Operating modes.....	- 28 -
7.1.	Acquisition control (Change the frame rate)	- 28 -
7.2.	Exposure setting.....	- 29 -
7.2.1	Mode	- 29 -
7.2.2	Exposure time setting (Command: PE)	- 29 -
7.2.3	Exposure sequence (Commands EXSQ, PES(N), PER(N), EXSR, EXSEP, PE1~PE16)	- 30 -
7.3.	Trigger Control.....	- 30 -
7.3.1	Selection of the trigger input (Command: TI)	- 30 -
7.3.2	Trigger activation (Command: TA)	- 30 -
7.3.3	Trigger Overlap (Command: TO)	- 30 -
7.3.4	Pre-Dump (Command: TD)	- 30 -
7.4.	Exposure auto control (Commands: ASC, ASCS, ASCEA, ASCEI).....	- 31 -
7.5.	Normal continuous operation.....	- 31 -
7.6.	Timed mode (so-called EPS operation)	- 32 -
7.6.1	If the overlap setting is "OFF"	- 33 -
7.6.2	If the overlap setting is "Readout"	- 33 -
7.7.	Trigger width mode (so-called PWC)	- 34 -
7.7.1	If the overlap setting is "Non Overlap"	- 34 -
7.7.2	If the overlap setting is "Readout"	- 35 -
7.8.	Pre-dump mode (so-called RCT)	- 36 -
7.9.	PIV (Particle Image Velocimetry)	- 37 -
7.10.	Operation and function matrix	- 38 -
8.	Other functions	- 39 -
8.1	Black level control (Command : BL).....	- 39 -
8.2	Gain control (Relative commands GA,GJUT1,2,3)	- 39 -
8.3	Tap control (Relative commands AWA, ABA, GJUT1, GJUT2, GJUT3)	- 39 -
8.4.	Exposure auto (Related Commands : ASC=1(ON), ASCS, ASCEA, ASCEI).....	- 40 -
8.5.	Auto white balance (Related commands:AWB, PGS, PGR, PGGR, PGGB, PGB).....	- 40 -
8.6.	Blemish compensation.....	- 41 -
8.7.	LUT (Relative commands LUTC, LUTR, LUYG, LUTB)	- 41 -
8.8.	Gamma (Command: GAMS)	- 42 -
8.9.	Flat Field Correction (FFC) (Command: SDR)	- 42 -
8.10.	Bayer color interpolation (Command : BCIC) (Only for AB-201CL).....	- 43 -
8.11.	Test pattern (Command: TPN)	- 43 -
8.12.	Temperature sensor (Command : TMPO)	- 44 -
8.13	ALC	- 44 -
9.	Configuring the camera.....	- 45 -
9.1	RS-232C control.....	- 45 -
9.2	Communication setting	- 45 -
9.3.	Save and load functions	- 46 -
9.4	Command list	- 46 -
10.	Camera control tool	- 55 -



10.1.	Control tool windows	- 55 -
10.2.	Camera Control Tool interface	- 55 -
10.2.1	About Window	- 55 -
10.2.2	Communication Window	- 56 -
10.2.3	Camera Control Window	- 58 -
11.	External appearance and dimensions	- 60 -
12.	Specifications	- 61 -
12.1	Spectral response	- 61 -
12.2	Specifications table	- 62 -
Appendix	- 64 -
1.	Precautions	- 64 -
2.	Typical Sensor Characteristics	- 64 -
3.	Caution when mounting a lens on the camera	- 64 -
4.	Caution when mounting the camera	- 65 -
5.	Caution for cleaning CCD and Low Pass Filter	- 65 -
6.	Exportation	- 65 -
7.	References	- 65 -
	Manual change history	- 66 -
	User's Record	- 67 -

Before using AM-201CL and AB-201CL

The CCD sensor used in the AM-201CL and AB-201CL operates with four (4) taps or two(2) taps, and a 40MHz pixel clock. However, the video output through the Camera Link[®] interface is 2 taps for monochrome and Bayer color modes, and 1 tap for monochrome , Bayer color modes and RGB color output.

Accordingly, the pixel clock at the Camera Link interface is 80MHz and users should make sure that the specifications and performance of connected frame grabber boards and PCs can support this clock speed. The maximum length of the Camera Link cable may also be impacted.

The AM-201CL and AB-201CL are high resolution and high frame rate cameras with 1920(h) x 1080(v) pixel resolution and a 64fps frame rate for 2 tap output or a 32fps frame rate for 1 tap output.

Accordingly, the amount of data produced is very large. If the output is set at 10-bits or 12-bits per pixel, the total data stream is approx. 2.0 Gbit/sec. as a 16-bit process in the frame grabber board. A frame grabber board connected to the PCI-32bit bus has a bandwidth of 2.1 Gbits/sec.

This is almost the limit of bandwidth and in this case, it is recommended to use the PCI-64bit bus or to use a frame grabber board that can utilize the PCI Express Bus x 8.

JAI recommends using a PC with CPU better than i7.



1. General

The AM-201CL is a 2/3 inch monochrome progressive scan CCD camera and the AB-201CL is the equivalent Bayer mosaic progressive scan CCD camera. Both have 2 million pixels resolution and 4 tap or 2 tap readouts in the sensor. They provide 64 frames per second for continuous scanning with 1920 x 1080 full pixel resolution for 2 tap output. 1 tap output, such as the RGB output of the AB-201CL, is 32 fps.

Both AM-201CL and AB-201CL are suitable for automated optical inspection applications, such as solid state device inspection or material surface inspection.

They incorporate various processing circuits such as LUT, FFC(Flat Field Compensation), blemish compensation and Bayer interpolation. The AM-201CL and AB-201CL work in continuous, timed and trigger width trigger modes for acquisition control. Both cameras also have Pre-dump and PIV modes.

The AM-201CL has H and V binning modes and both the AM-201CL and AB-201CL have an AOI (Area Of Interest) mode for achieving a faster frame rate with a reduced field of view.

The digital output is through a Camera Link[®] digital interface with 8-bits , 10-bits or 12-bits of pixel bit depth. For the RGB output, only 8-bits is available.

The latest version of this manual can be downloaded from: www.jai.com

The latest version of Camera Control Tool for the AM-201CL and AB-201CL can be downloaded from: www.jai.com

For camera revision history, please contact your local JAI distributor.

Special note:

In this manual, some new terminologies are used as compared to the terms used in previous JAI operation manuals.

Previous

EPS
PWC
RCT (Reset Continuous)
Partial scan
Shutter
Auto shutter

New

Timed
Trigger width
Pre-dump
AOI (Area Of Interest)
Exposure
Exposure Auto

2. Camera nomenclature

The standard camera composition consists of the camera main body and lens protection cap.

The camera is available in the following versions:

AM-201CL

Where **A** stands for "Advanced" family, **M** stands for "Monochrome", **200** represents the resolution "2 million pixel" , **CL** stands for "Camera Link" interface

AB-201CL


Where **A** stands for "Advanced" family, **B** stands for "Bayer mosaic color", **200** represents the resolution "2 million pixel" , **CL** stands for "Camera Link" interface

3. Main features

- C3 Advanced series 2/3 " progressive scan camera
- Monochrome and Bayer mosaic color versions
- 1920 (h) x 1080 (v) active pixels
- 5.5µm square pixels
- 57dB or more S/N
- 8-bit, 10-bit or 12-bit output for monochrome and Bayer or 8-bit per color output for RGB color
- 64 frames/second with full resolution in continuous operation for 2 tap output (monochrome or Bayer) or 32 frames/second for 1 tap output (monochrome, Bayer and AB-201CL RGB output (in-camera interpolation))
- Various readout modes, horizontal and vertical binning (AM-201CL only) and AOI (Area Of Interest) modes for faster frame rate
- -3dB to +24dB gain control for AM-201CL and 0dB to +24dB for AB-201CL
- 10µs (1/100,000) to 2 seconds exposure control in 1µs step (Exposure/Timed control mode)
- Timed , trigger width for exposure control,
- Pre-dump (RCT) and PIV modes for specific applications
- Auto gain control
- Various pre-processing circuits are provided
 - Programmable LUT
 - Gamma correction from 0.45 to 1.0
 - Flat Field Correction
 - Bayer white balance with manual or one-push auto (AB-201CL only)
 - Bayer color interpolation (AB-201CL only)
 - Blemish compensation
- Test pattern signal generator is built in
- Auto iris lens video output with H-sync
- Setup by Windows XP/Vista/7 via serial communication

4. Locations and functions

4.1 Locations and functions

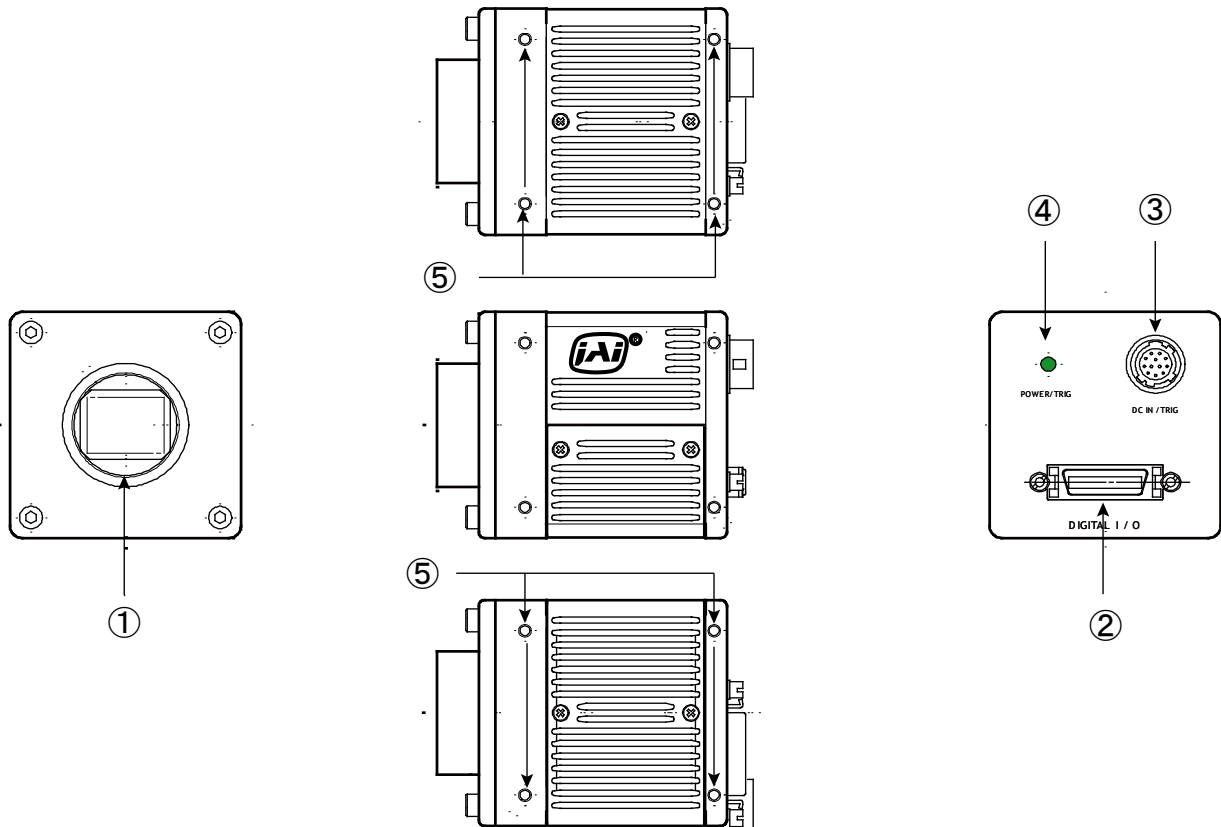

- | | |
|--------------------|---|
| ① Lens mount | C-mount (Note *1) |
| ② 26-pin connector | Camera Link Interface (Note *2) |
| ③ 12-pin connector | DC+12V and trigger input |
| ④ LED | Indication for power and trigger input |
| ⑤ Mounting holes | M3 depth 4.5mm for fixing the camera to the mount plate or tripod mount plate (Note *3) |

*1) Note: Rear protrusion on C-mount lens must be less than 10.0mm.

*2) Note: When a Camera Link cable is connected to the camera, please do not excessively tighten screws by using a driver. The Camera Link receptacle on the camera might be damaged. For security, the strength to tighten screws is less than 0.291 Newton meter (Nm). Tightening by hand is sufficient in order to achieve this.

*3) Note: The part number for the tripod adapter plate (with 1/4"-20 thread) is MP-41 (option).

Fig. 1 Locations

4.2 Rear panel

The rear panel mounted LED provides the following information:

- Amber: Power connected - initiating
- Steady green: Camera is operating in Continuous mode
- ✱ Flashing green: The camera is receiving external triggering

Note: The interval of flashing does not correspond with external trigger duration.

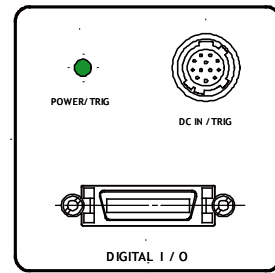



Fig. 2 Rear panel

5. Input and output

5.1 Connectors and pin assignment

5.1.1 Hirose 12Pin connector

5.1.1.1 Figure

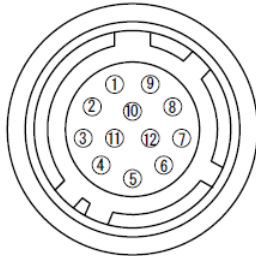

Type: HR10A-10R-12PB-01 (Hirose) male.
Use the part number HR10A-10P-12S for the cable side

Fig.3 Hirose 12-pin connector

5.1.1.2 Pin assignment

Pin no.	Signal	Remarks
1	GND	
2	DC input	+12V to +24V
3	GND	
4	Iris video	Only for Continuous and Pre-dump modes.
5	GND	
6	NC	
7	NC	
8	GND	
9	XEEN out	*1)
10	Trigger in	TI=1 (or Camera Link TI=0). *2)
11	DC input	+12V to +24V
12	GND	

*1) XEEN output can be configured with complementary emitter follower circuit or open collector by internal switch setting. The default is the complementary emitter follower circuit. See chapter 5.1.3 for the details.

*2) Factory default is trigger via Camera Link

5.1.2 Camera Link connector

5.1.2.1 Figure

Type: 26-pin MDR connector (3M 10226-1A10PL)

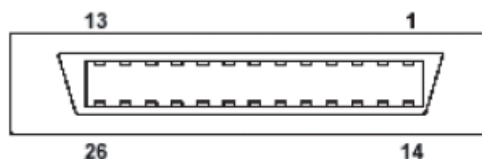



Fig.4 Camera Link connector

5.1.2.2 Pin assignment

Pin No	In/Out	Name	Note
1,14		Shield	GND
2(-),15(+)	O	TxOUT0	Data out
3(-),16(+)	O	TxOUT1	
4(-),17(+)	O	TxOUT2	
5(-),18(+)	O	TxCk	Clock for CL
6(-),19(+)	O	TxOUT3	Data out
7(+),20(-)	I	SerTC (RxD)	LVDS Serial Control
8(-),21(+)	O	SerTFG (TxD)	
9(-),22(+)	I	CC1 (Trigger)	Trigger IN
10(+),23(-)		N.C	
11,24		N.C	
12,25		N.C	
13,26		Shield	GND

5.1.3 DIP switch SW500


The XEEN output through HIROSE 12-pin #9 can be connected to the complementary emitter follower circuit or the open collector circuit. DIP switch SW500 is used to change circuits. Factory default setting is the complementary emitter follower circuit.

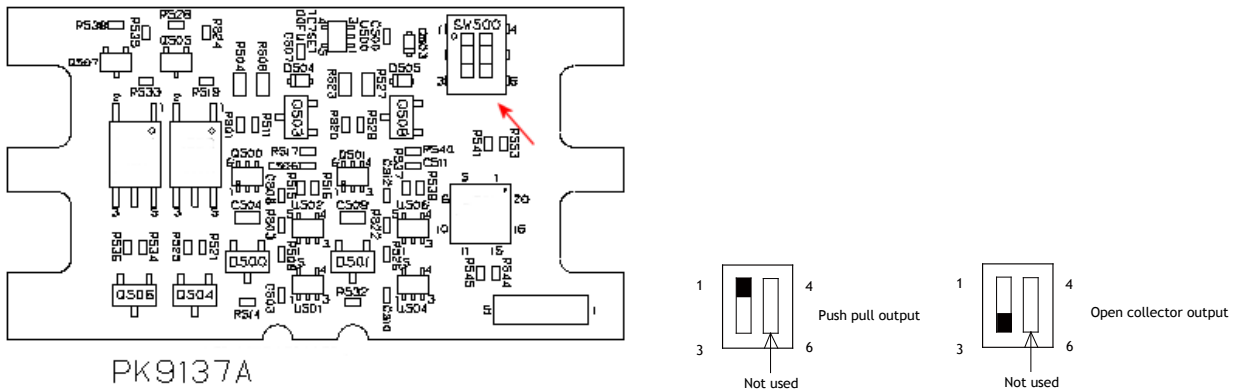

PK9137A

Fig.5 SW500

PK9137A board can be found at the top of the camera after removing the top cover.

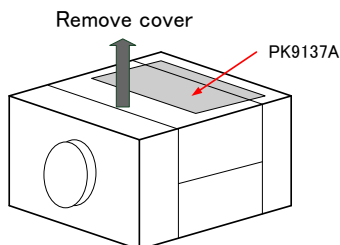

5.2 Camera Link interface

Port/Signal	2-tap			1-tap				Pin No.
	8bit	10bit	12bit	8bit	10bit	12bit	RGB 8-bit	
Port A0	TAP A0	TAP A0	TAP A0	TAP A0	TAP A0	TAP A0	R0	Tx0
Port A1	TAP A1	TAP A1	TAP A1	TAP A1	TAP A1	TAP A1	R1	Tx1
Port A2	TAP A2	TAP A2	TAP A2	TAP A2	TAP A2	TAP A2	R2	Tx2
Port A3	TAP A3	TAP A3	TAP A3	TAP A3	TAP A3	TAP A3	R3	Tx3
Port A4	TAP A4	TAP A4	TAP A4	TAP A4	TAP A4	TAP A4	R4	Tx4
Port A5	TAP A5	TAP A5	TAP A5	TAP A5	TAP A5	TAP A5	R5	Tx6
Port A6	TAP A6	TAP A6	TAP A6	TAP A6	TAP A6	TAP A6	R6	Tx27
Port A7	TAP A7	TAP A7	TAP A7	TAP A7	TAP A7	TAP A7	R7	Tx5
Port B0	TAP B0	TAP A8	TAP A8		TAP A8	TAP A8	G0	Tx7
Port B1	TAP B1	TAP A9	TAP A9		TAP A9	TAP A9	G1	Tx8
Port B2	TAP B2		TAP A10			TAP A10	G2	Tx9
Port B3	TAP B3		TAP A11			TAP A11	G3	Tx12
Port B4	TAP B4	TAP B8	TAP B8				G4	Tx13
Port B5	TAP B5	TAP B9	TAP B9				G5	Tx14
Port B6	TAP B6		TAP B10				G6	Tx10
Port B7	TAP B7		TAP B11				G7	Tx11
Port C0		TAP B0	TAP B0				B0	Tx15
Port C1		TAP B1	TAP B1				B1	Tx18
Port C2		TAP B2	TAP B2				B2	Tx19
Port C3		TAP B3	TAP B3				B3	Tx20
Port C4		TAP B4	TAP B4				B4	Tx21
Port C5		TAP B5	TAP B5				B5	Tx22
Port C6		TAP B6	TAP B6				B6	Tx16
Port C7		TAP B7	TAP B7				B7	Tx17
LVAL								Tx24
FVAL								Tx25
DVAL								Tx26
EEN								Tx23

5.3 Interface circuits

5.3.1 Iris video output

This signal can be used for lens iris control in Continuous and Pre-dump modes. When Auto Iris lens Control Signal Output (AIC) is set to 0=ON and Iris State Control (IRSC) is set to 0=Video, this function is activated. IRSC also has 1=Close and 2=Open and both functions force the lens iris to close or open, if these commands are applied.

The signal for iris video output is taken from the video signal after the gain control. However, if Iris Reverse Gain (IRRG) is set to ON, the added gain is deducted and as the result, the output is identical to the CCD direct output. This function works in the AGC mode too. The signal is 1.0 V p-p (with H-sync) from 75 Ω without termination.

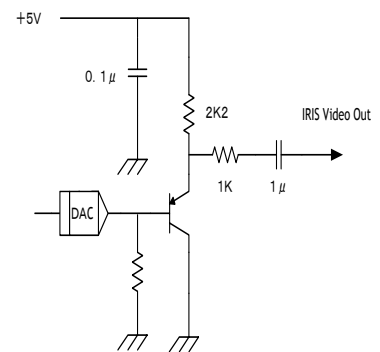


Fig. 6 . Iris video

The iris video signal is composed to average the video level in the center area of each frame and can be output as a composite signal with H-sync. As shown in the following figure, each frame has its own video level which is averaged.

5.4 Output

5.4.1 Digital output

5.4.1.1 Bit allocation

CCD out		Analog Out (Equivalent)	Digital Out		
			8bit	10bit	12bit
Black	0%	Setup 3.6%, 25mV	8LSB	32LSB	128LSB
350mV/290mV	100%	700mV	222LSB	890LSB	3560LSB
400mV ↑ / 333mV ↑	115%	800mV	255LSB	1023LSB	4095LSB

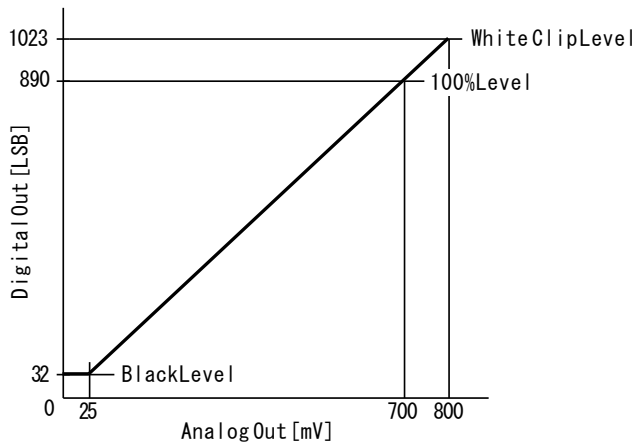


Fig.10 Bit allocation

5.4.1.2 Camera link output (2 tap output)

The AM-201CL and AB-201CL have a 4-tap readout from the CCD. The 4-tap output is combined horizontally to output 2 taps through the Camera Link interface. The command SDT (Sensor Digitization Taps) can select “0” for 2 taps and “1” for 1 tap.

If 2 taps is selected, the monochrome or Bayer output (8-bits, 10-bits or 12-bits) can be output through the Camera link interface, divided into top and bottom halves. In this case, the frame rate is 64.2fps.

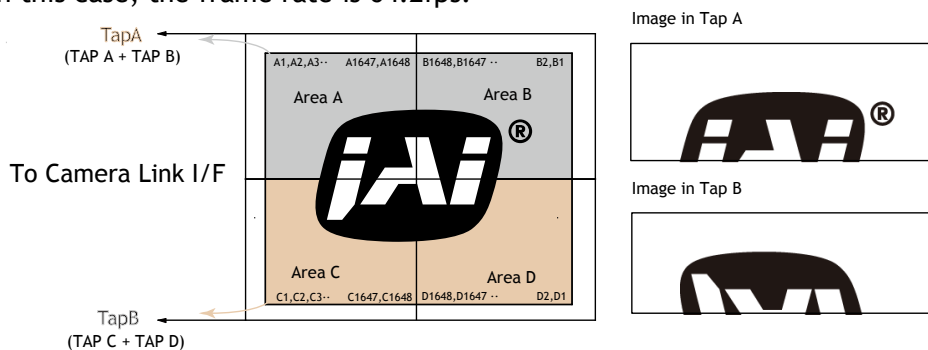


Fig.11 2-tap output

5.4.2.3 Camera link output (1 tap output)

If 1 tap output is selected, monochrome, Bayer (8-bits, 10-bits or 12-bits) or RGB (8-bits only) output can be output through Camera Link interface without dividing the image. For 1 tap output, the frame rate is 32.2fps.

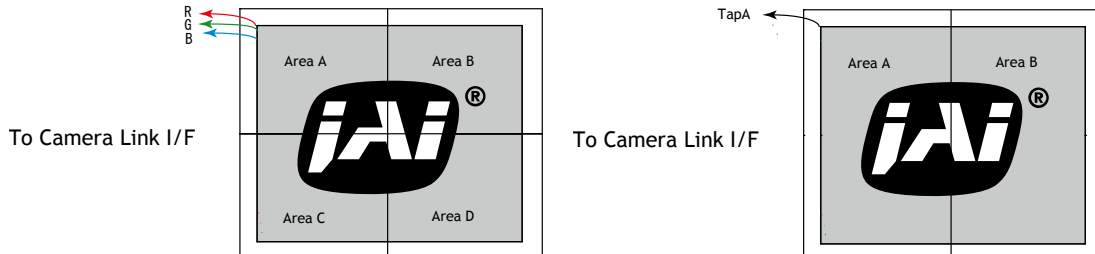


Fig.12 1tap output

5.4.2 Partial scan readout (AOI) (Commands: STL, ETL)

The AOI works like partial scanning. By using the AOI function, a faster frame rate can be achieved. The start line of the image (Offset Y) and the image height (Height) can be set as desired. However, the start pixel and/or end pixel of each line cannot be changed. In the AM-201CL and AB-201CL RGB output, The Offset Y and Height can be set in 1 line increments. For the AB-201CL Bayer mode, output can be set in 2-line steps.

STL: Offset Y (Read out start line)
 ETL: Height (Readout line numbers)

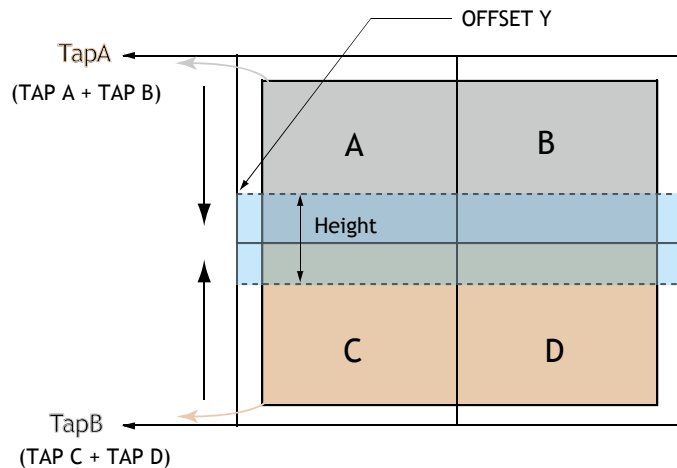


Fig.13 AOI setting

Note for AOI setting

In the AM-201CL and AB-201CL, the frame rate setting has priority. If AOI is used, the frame rate setting should use fewer lines than that of AOI height.

For AOI setting, if the upper TAP and lower TAP have the same duration, the fastest frame rate can be achieved. Thus, if the AOI is centered vertically within the image, the frame rate is maximized. Examples of the settings are shown in sections 5.4.2.4 and 5.4.2.5.

5.4.2.1 Frame rate calculation if AOI is set

The calculation method for the frame rate in AOI mode depends on the setting conditions of offset, height, bit allocation and binning control.

It also depends on the position of the readout such as the upper TAP, lower TAP and covering both TAPs.

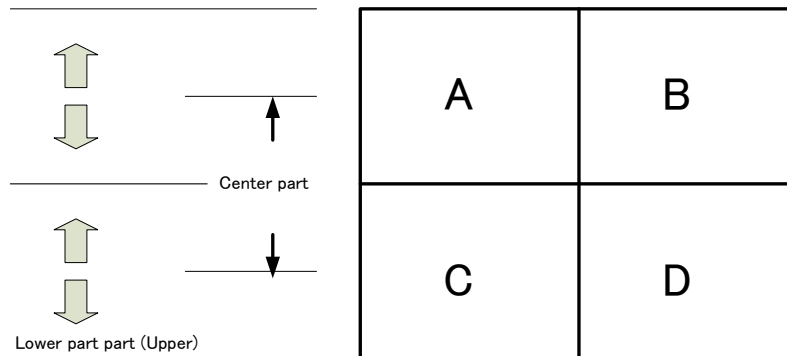


Fig.14 the position of the readout

5.4.2.2 2 tap output

5.4.2.2a Binning OFF

If the bit allocation is set to 8-, 10- or 12-bit and the binning control is OFF or 2x1

- 1) For a centered readout which covers both the upper and lower TAPs
Use the following two formulas to calculate frame lines (A) and frame lines (B).
Use the larger number of frame lines for calculating the frame rate.
If they are the same number of lines, either one can be used.

$$\text{Frame lines (A)} = \text{Roundup} \left(\frac{(\text{Offset}+1)}{4} \right) + (540 - \text{Offset}) + 10$$

$$\text{Frame lines (B)} = \text{Roundup} \left\{ \frac{[1081 - (\text{Offset} + \text{Height})]}{4} \right\} + [(\text{Offset} + \text{Height}) - 540] + 10$$

$$\text{Frame rate (Hz)} = 1 / (\text{Frame lines number} \times 0.00002825)$$

- 2) If the readout is only in the upper TAP
In this case, $\text{Offset} < 540$ and $(\text{Offset} + \text{Height}) \leq 540$

$$\text{Roundup} \left\{ \frac{(\text{Offset} + 1)}{4} \right\} + \text{Roundup} \left[\frac{540 - (\text{Offset} + \text{height})}{4} \right] + \text{Height} + 10$$

$$= \text{Frame lines number}$$

$$\text{Frame rate (Hz)} = 1 / (\text{Frame lines number} \times 0.00002825)$$

- 3) If the readout is only in the lower TAP
In this case, $\text{Offset} > 540$

$$\text{Roundup} \left[\frac{(1080 - (\text{Offset} + \text{Height}))}{4} \right] + \text{Roundup} \left[\frac{(\text{Offset} - 540)}{4} \right] + \text{Height} + 10 =$$

$$\text{Frame lines number}$$

$$\text{Frame rate (Hz)} = 1 / (\text{Frame lines number} \times 0.00002825)$$

5.4.2.2b Binning ON

If the bit allocation is set to 8-,10- or 12-bit and the binning control is 1x2 or 2x2

Note: In this case, offset Y and height should use only even numbers.

- 1) For a centered readout which covers both the upper and lower TAPS
 Use the following two formulas to calculate frame lines (A) and frame lines (B).
 Use the larger number of frame lines for calculating the frame rate.
 If they are the same number of lines, either one can be used.

$$\text{Frame lines (A)} = \text{Roundup} \{ (\text{Offset}+1)/4 \} + (540 - \text{Offset})/2 + 10$$

$$\text{Frame lines (B)} = \text{Roundup} \{ [1081 - (\text{Offset} + \text{Height})]/4 \} + [(\text{Offset} + \text{Height}) - 540]/2 + 10$$

$$\text{Frame rate (Hz)} = 1 / (\text{Frame lines number} \times 0.00003085)$$

- 2) If the readout is only in the upper TAP
 In this case, $\text{Offset} < 540$ and $(\text{Offset} + \text{Height}) \leq 540$

$$\text{Roundup} \{ (\text{Offset} + 1) / 4 \} + \text{Roundup} \{ [540 - (\text{Offset} + \text{height})] / 4 \} + \text{Height} / 2 + 10 =$$

= Frame lines number

$$\text{Frame rate (Hz)} = 1 / (\text{Frame lines number} \times 0.00003085)$$

- 3) If the readout is only in the lower TAP
 In this case, $\text{Offset} > 540$

$$\text{Roundup} \{ [1080 - (\text{Offset} + \text{Height})] / 4 \} + \text{Roundup} \{ (\text{Offset} - 540) / 4 \} + \text{Height} / 2 + 10 =$$

Frame lines number

$$\text{Frame rate (Hz)} = 1 / (\text{Frame lines number} \times 0.00003085)$$

5.4.2.3 1 tap output

5.4.2.3a Binning OFF

If the bit allocation is set 8-,10- or 12-bit or RGB and the binning control is OFF or 2x1
 (In the case of RGB, the binning control is not available)

$$\text{Roundup} \{ (\text{Offset} + 1) / 4 \} + \text{Roundup} \{ (1080 - \text{Height} + \text{Offset}) / 4 \} + \text{Height} + 18 =$$

Frame number

$$\text{Frame rate (Hz)} = 1 / (\text{Frame lines number} \times 0.00002825)$$

5.4.2.3b Binning ON

If the bit allocation is set 8-,10- or 12-bit and the binning control is 1x2 or 2x2.

Note: In this case, offset Y and height should use only even numbers.

$$\text{Roundup} \{ (\text{Offset} + 1) / 4 \} + \text{Roundup} \{ (1080 - \text{Height} + \text{Offset}) / 4 \} + \text{Height} / 2 + 18 =$$

Frame number

$$\text{Frame rate (Hz)} = 1 / (\text{Frame lines number} \times 0.00003085)$$

5.4.2.4 Setting example 1
2 tap output, the binning control is OFF or 2x1

Partial	Offset	Height	Frame Line	Frame Frequency
Full	0	1080	551	64.24
1/2	0	540	551	64.24
	270	540	348	101.72
	540	540	551	64.24
1/4	0	270	349	101.43
	270	270	348	101.72
	404	270	248	142.73
	540	270	348	101.72
	810	270	348	101.72
1/8	0	136	248	142.73
	404	136	248	142.73
	472	136	197	179.69
	540	136	248	142.73
	944	136	247	143.31
1/16	0	68	197	179.69
	472	68	197	179.69
	506	68	171	207.01
	540	68	197	179.69
	1012	68	196	180.60

5.4.2.5 Setting example 2
2 tap output and the binning control is 1x2 or 2x2)

Partial	Offset	Height	Frame Line	Frame Frequency
Full	0	1080	281	115.36
1/2	0	540	280	115.77
	270	540	213	152.18
	540	540	281	115.36
1/4	0	270	213	152.18
	270	270	213	152.18
	404	270	180	180.08
	540	270	213	152.18
	810	270	213	152.18
1/8	0	136	179	181.09
	404	136	180	180.08
	472	136	163	198.86
	540	136	180	180.08
	944	136	179	181.09
1/16	0	68	162	200.09
	472	68	163	198.86
	506	68	154	210.49
	540	68	163	198.86
	1012	68	162	200.09

5.4.2.6 Setting example 3

1 tap output and the binning control is set to OFF or 2x1

Partial	Offset	Height	Frame Line	Frame Frequency
Full	0	1080	1099	32.21
1/2	Any	540	694	51.01
1/4	Any	270	492	71.95
1/8	Any	136	391	90.53
1/16	Any	68	340	104.11

5.4.2.7 Setting example 4

1 tap output and the binning control is set to 2x1 or 2x2

Partial	Offset	Height	Frame Line	Frame Frequency
Full	0	1080	559	57.99
1/2	Any	540	424	76.45
1/4	Any	270	357	90.80
1/8	Any	136	323	100.36
1/16	Any	68	306	105.93

5.4.3 Binning (Command: BNC) (Only for AM-201CL)

This function is available only for AM-201CL. In binning mode, adjacent pixels in the horizontal direction and/or vertical direction are combined and output as one pixel. The possible combinations are shown below.

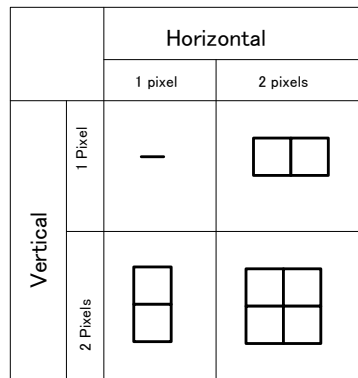


Fig. 15 Binning modes

Binning achieves a higher frame rate, as well as better sensitivity.

On the other hand, the resolution becomes less than the full frame readout.

H x V (Pixels)	Sensitivity	Spatial resolution	
		H direction	V direction
1 x 2	2 times	Unchanged	1/2
2 x 1	2 times	1/2	Unchanged
2 x 2	4 times	1/2	1/2

5.4.4 Bayer output pattern

The AB-201CL starts with GRG on odd lines and BGB on even lines as shown below. If AOI is used, Offset Y can be set every 2 lines and therefore, it always starts with a GRG sequence.

		H1	H2	H3	H4	H5	H6	H7
signal out	V1	Gr	R	Gr	R	Gr	R	Gr
	V2	B	Gb	B	Gb	B	Gb	B
	V3	Gr	R	Gr	R	Gr	R	Gr

Fig. 16 Bayer sequence

6. Sensor layout and timing

6.1 Sensor layout

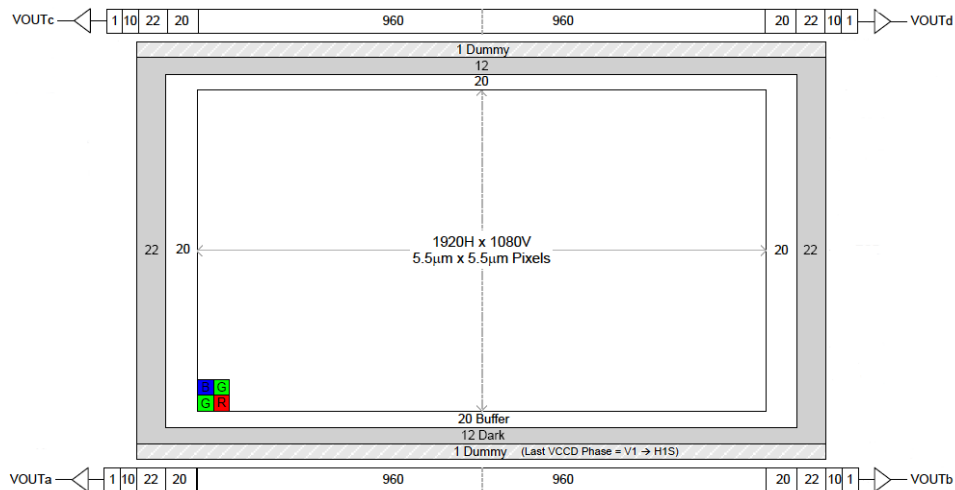



Fig.17 Sensor layout

6.2. Vertical timing (2 tap output)

Bit allocation: 8-bit, 10-bit or 12-bit

6.2.1 If the binning control is BNC=0(OFF) or BNC=2(2x1)

6.2.1.1 AOI default setting (Offset=0, Height=1080)

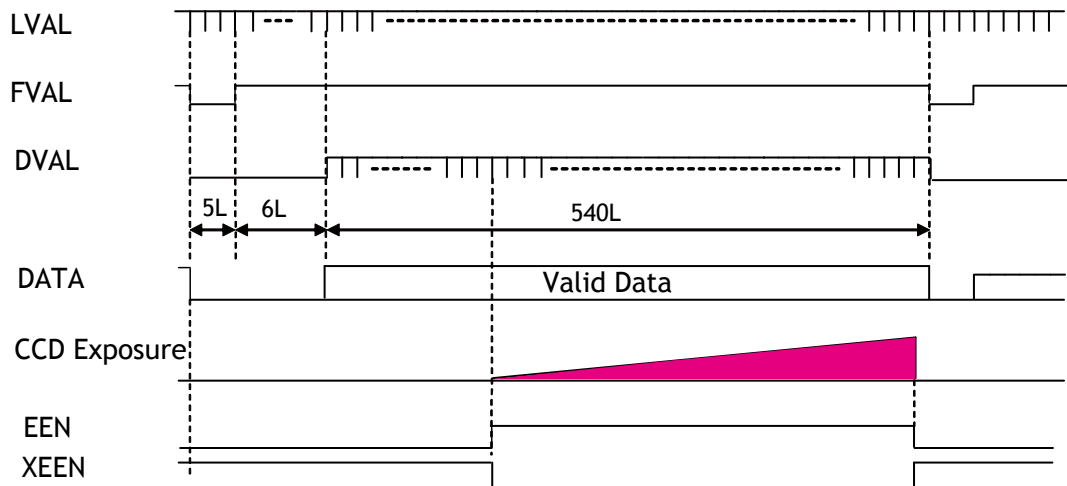

◆ Frame rate: 551L, 64.2fps

Fig.18 Vertical timing (2 tap output, Binning OFF, AOI default)

6.2.1.2 AOI setting

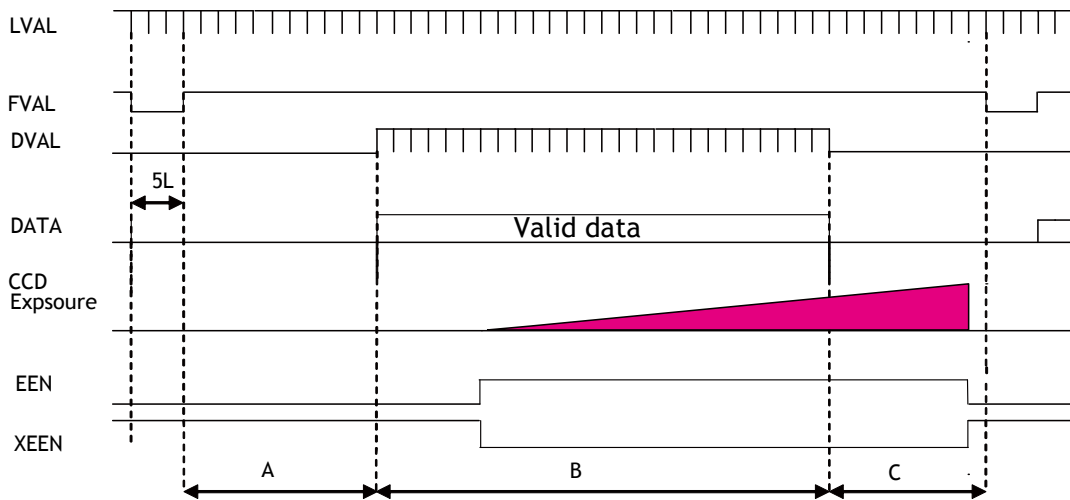



Fig.19 Vertical timing (2 tap output, Binning OFF, AOI setting)

Frame rate examples when the start line and the end line are set as follows

Offset	HEGHT	A (L)	B (L)	C (L)	Total line (L)	Frame rate (Hz)
270	540	73	270	0	348	101.7
404	272	107	136	0	248	142.7
134	272	39	272	34	350	101.1
202	136	56	136	51	248	142.7

6.2.2 If the binning control is BNC=1(1x2) or BNC=3(2x2)

6.2.2.1 AOI initial setting (Offset=0, Height=1080)

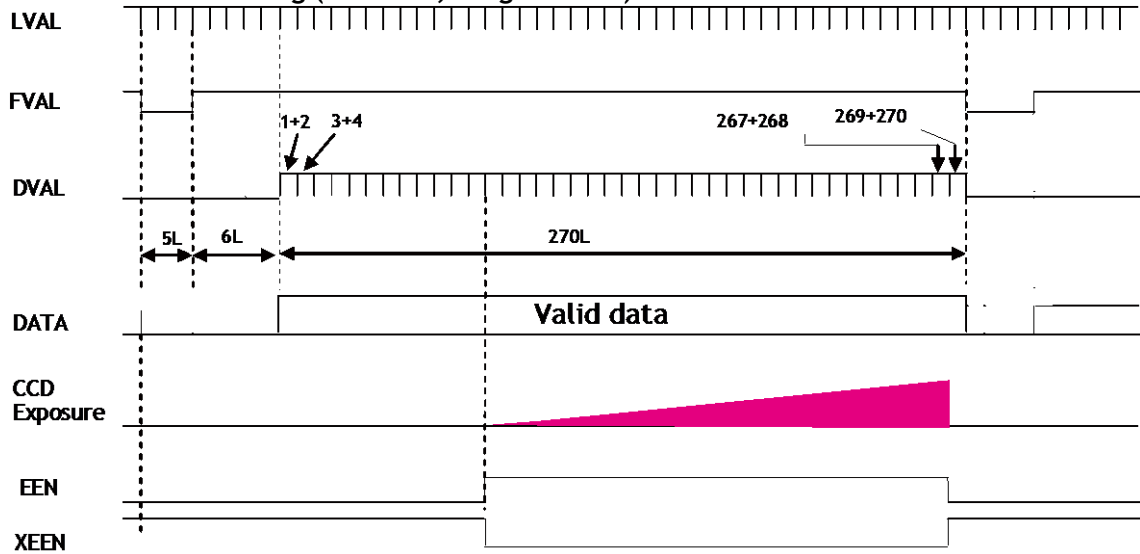

Frame rate : 281L 115.36fps

Fig.20 Vertical timing (2 tap output, Binning ON, AOI initial)

6.2.2.2 AOI setting

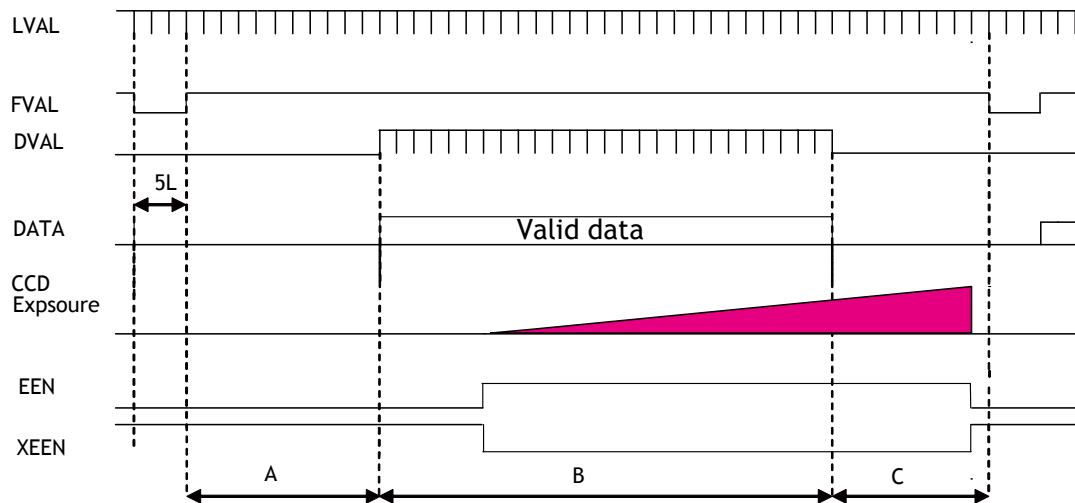


Fig.21 Vertical timing (2 tap output , Binning ON, AOI setting)


Offset	HEGHT	A (L)	B (L)	C (L)	Total line (L)	Frame rate (Hz)
270	540	73	135	0	213	152.1
404	272	107	68	0	180	180.0
134	272	39	136	34	214	151.4
202	136	56	68	51	180	180.0

6.3. Vertical timing (1 tap output)

Bit allocation : 8-bit, 10-bit or 12-bit
 Bit allocation : RGB (AB-201CL only)

6.3.1 If the binning control is 0=OFF or 2=2x1

6.3.1.1 AOI initial setting

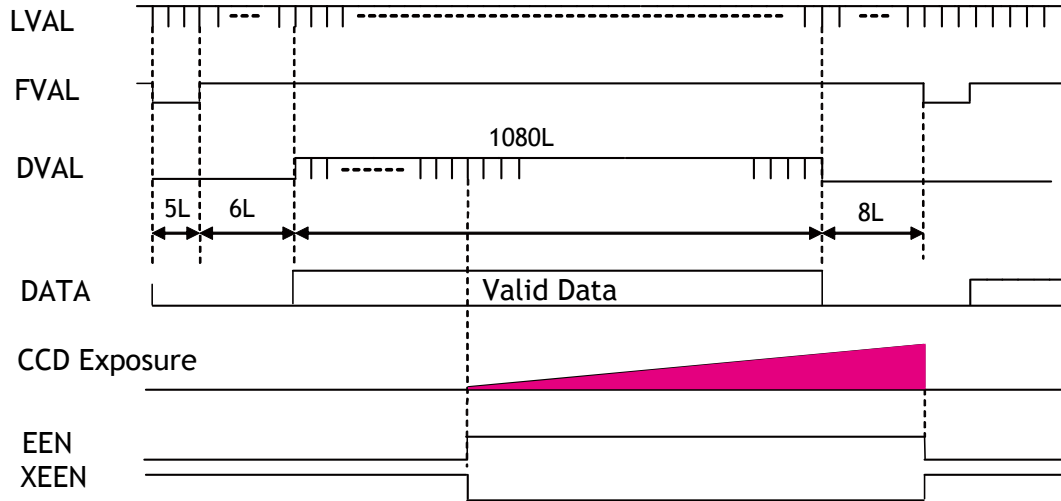

Frame rate: 1099L, 32.2fps

Fig.22 Vertical timing (1 tap output, Binning OFF)

6.3.1.2 AOI setting

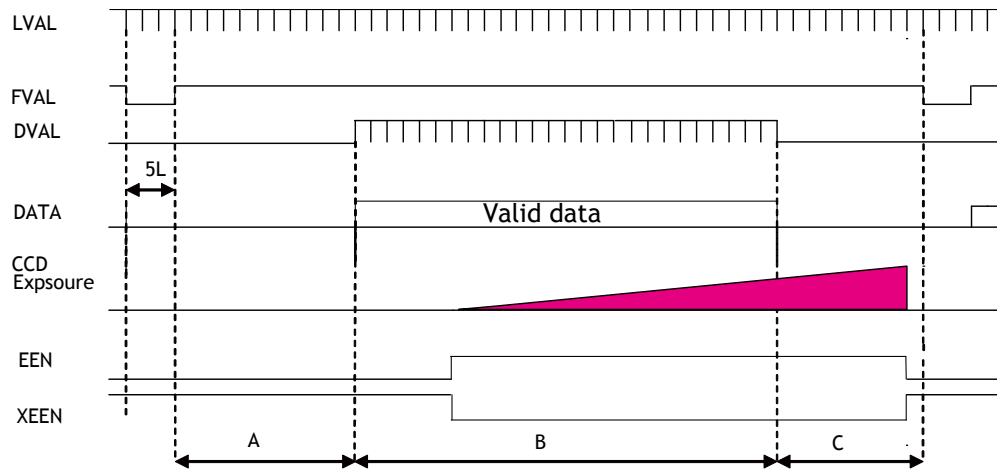



Fig.23 Vertical timing (1 tap output, Binning OFF)

Offset	HEIGHT	A (L)	B (L)	C (L)	Total line (L)	Frame rate (Hz)
136	812	40	812	41	898	39.4
270	540	73	540	76	694	51.0
404	270	107	270	110	492	71.9
472	136	124	136	126	391	90.5

6.3.2 If the binning control is set to 1=1x2 or 3=2x2

Bit allocation : 8-bit, 10-bit or 12-bit


6.3.2.1 AOI initial set (Offset Y=0, Height=1080)

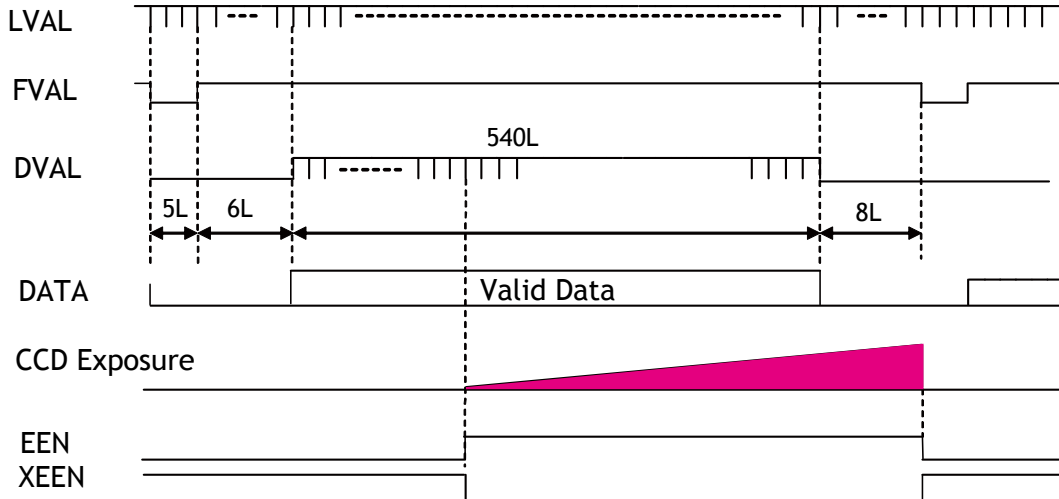

Frame rate: 559L, 58.0fps

Fig.24 Vertical timing (1 tap output, Binning ON, Initial AOI)

6.3.2.2 AOI setting

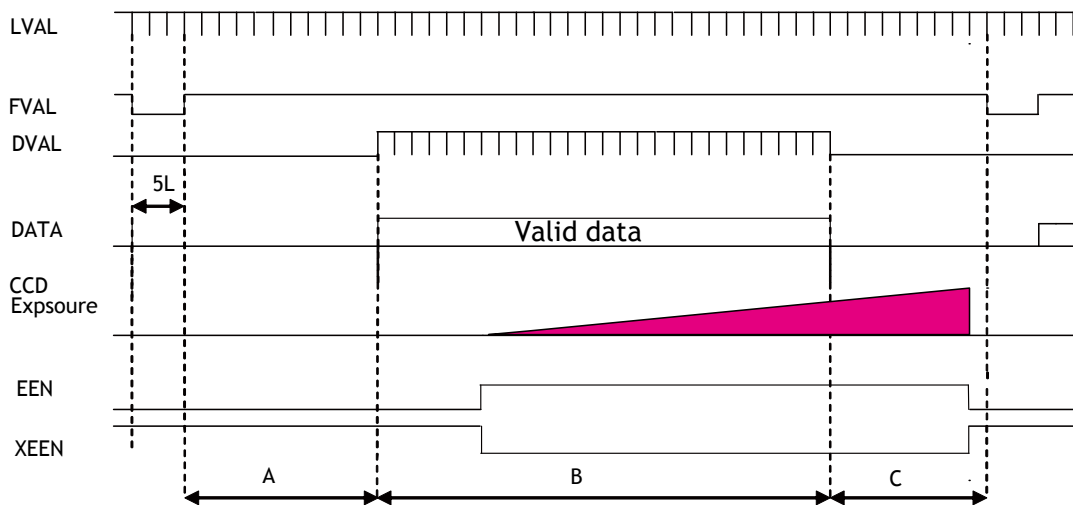


Offset	HE GHT	A (L)	B (L)	C (L)	Total line	Frame rate
136	812	40	406	41	492	65.8
270	540	73	270	76	424	76.4
404	270	107	135	110	357	90.8
472	136	124	68	126	323	100.3

Fig. 25 Vertical timing (1 tap output, Binning ON, AOI setting)

6.4. Horizontal timing


6.4.1 If the binning control is 0=OFF or 2=2x1

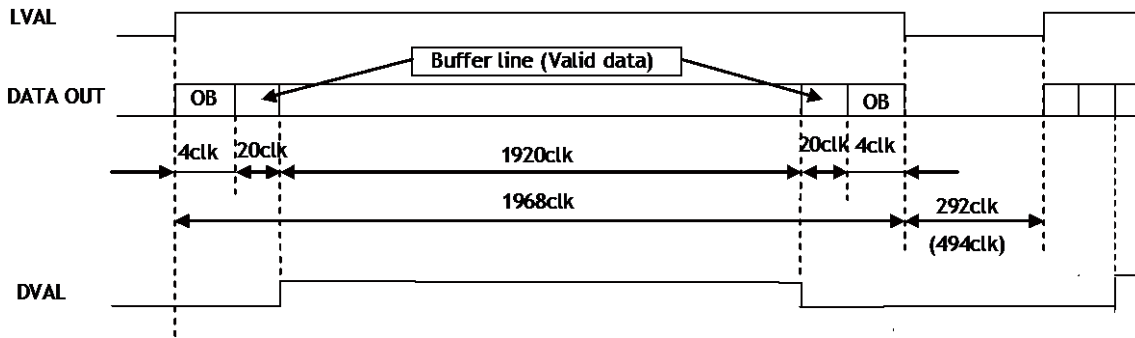

1LVAL 2260clk = 28.25 μ s 1clk=12.5ns (via Camera Link)
 (Exposure start line 1LVA 2462clk=30.775 μ s)

Fig.26 Horizontal timing (Vertical binning OFF)

6.4.2 If the binning control is 1=1x2 or 3=2x2

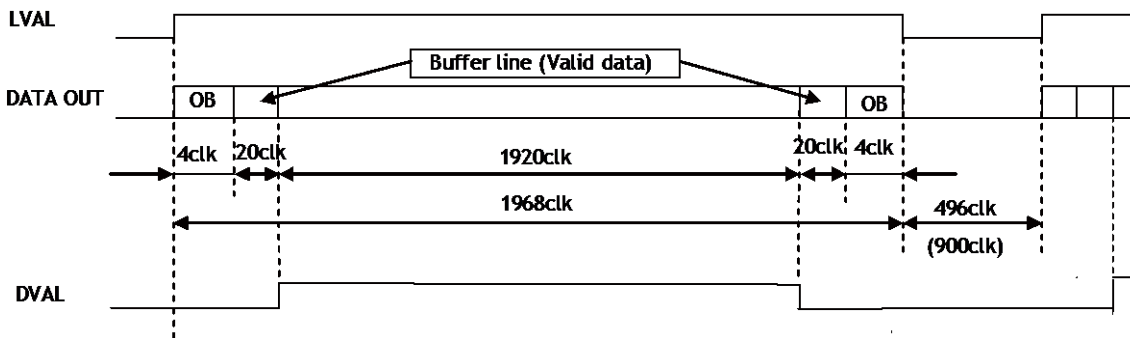

1LVAL 2464clk = 30.8 μ s 1clk=12.5ns (via Camera Link)
 (Exposure Start Line 1LVAL 2868clk=35.85 μ s)

Fig.27 Horizontal timing (Vertical binning ON)

6.4.3 DVAL output if the Binning control is set to 2=2x1 or 3=2x2

If the Binning control is set to 2=2x1 or 3=2x2, DVAL is output in one pixel period within the effective output period. Data is output by adding two pixels in horizontally as described below.

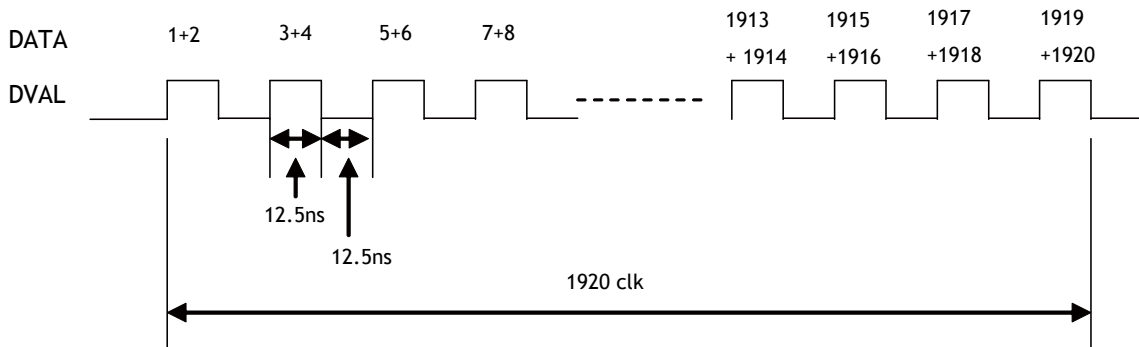


Fig.28 DVAL in the vertical binning

6.4.4 LVAL-LOW level period

- When waiting for a trigger signal or at the exposure start line, LVAL-LOW period varies as shown in the following table.

Binning Control	LVAL-LOW period		LVAL cycle	
	Ordinary	Exposure start	Ordinary	Exposure start
OFF, 2x1	292clk	494clk	2260clk 28.25µs	2462cl 30.775clk
1x2, 2x2	496clk	900clk	2464clk 30.8µs	2868clk 35.85µs

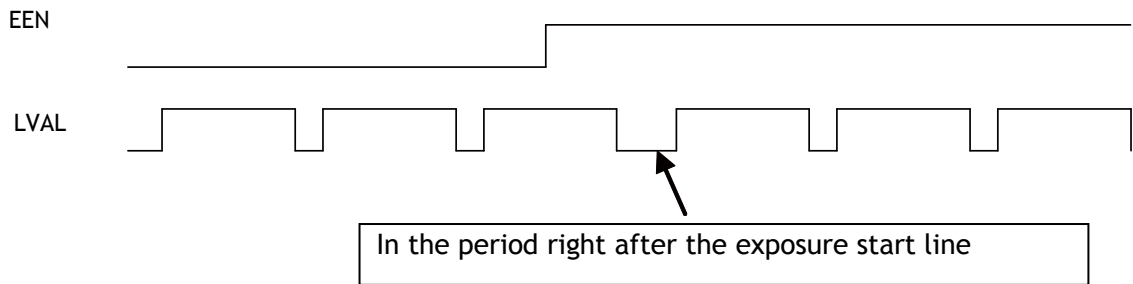


Fig.29 LVAL-LOW period varies

- When the trigger control mode is set to ON and Overlap is set to Readout, LVAL-LOW period is 1LVAL as the maximum.


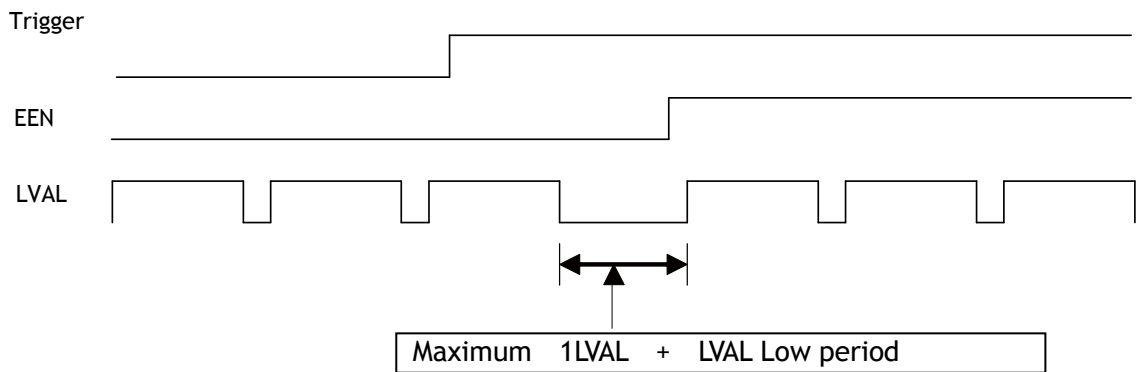


Fig.30 LVAL-LOW period if Overlap is set to Readout

7. Operating modes

The following controls are related to capturing the image.

 7.1. Acquisition control (Change the frame rate)



With Exposure Mode set to OFF, the frame rate can be set longer than 1 frame (the normal period needed to capture all pixels). By doing this, the sensitivity of the image can be increased. Maximum recommended exposure time is 2 seconds. This function is available when the trigger mode is OFF.

The setting range is:

Shortest	~	Longest
64.2Hz (1 frame period) (15.56ms)	~	0.5Hz (2.0 seconds)

Notes for setting


1. The value for setting is the number of line.
2. The actual frame rate is calculated in the following formula.

$$\text{Frame rate} = 1 / [(\text{Setting value (Line number)} \times (1 \text{ line period}))]$$

Where, 1 line period is 28.25 μ s

3. Default setting is 551 line
4. The available longest framer rate is 1.214s (0.824fps)

7.2. Exposure setting

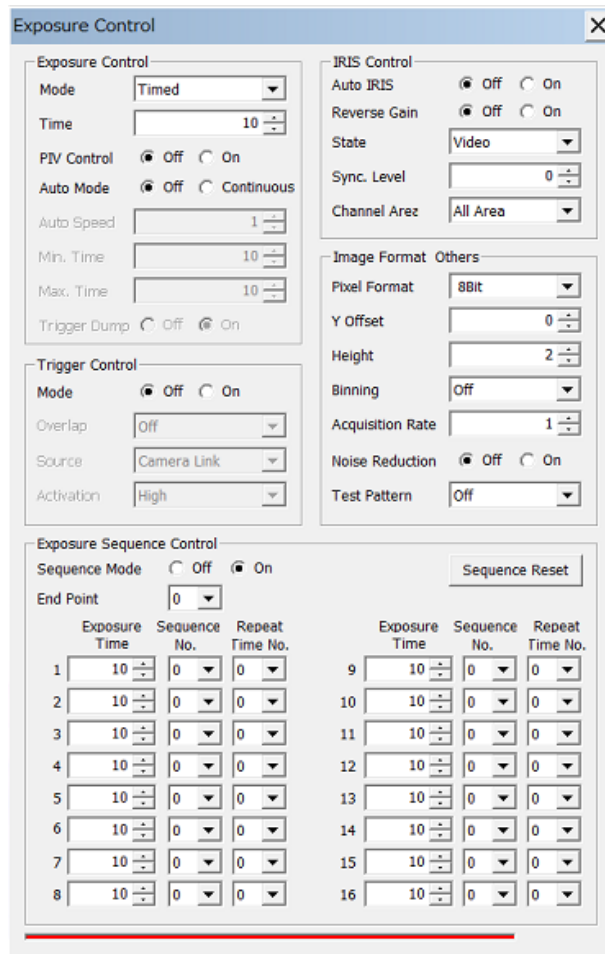

7.2.1 Mode

The AM-201CL and AB-201CL have the following exposure modes.

1. *EM=0* *OFF*
2. *EM=1* *Timed*
3. *EM=2* *Trigger width*

7.2.2 Exposure time setting (Command: PE)


PE command can be set if EM (Exposure mode) is set at 1 or 2.

		Minimum exposure time	~	Maximum exposure time
Full pixels		10 μ s	~	2 sec(Note)
Binning (HxV)	1 x 2			
	2 x 1			
	2 x 2			

Note: The AM-201CL and AB-201CL are designed so that frame rate has priority over exposure time. Accordingly, if the exposure time is set at a longer accumulation time than 1 frame (15.56ms), the frame rate should be set at a longer time than the exposure time.

- 7.2.3 Exposure sequence (Commands EXSQ, PES(N), PER(N), EXSR, EXSEP, PE1~PE16)**
 Up to 16 exposure settings can be preset as a sequence. Each setting can also be repeated. This function is effective only when the trigger mode is ON, the exposure mode is set to Timed and the exposure sequence is ON.

7.3. Trigger Control

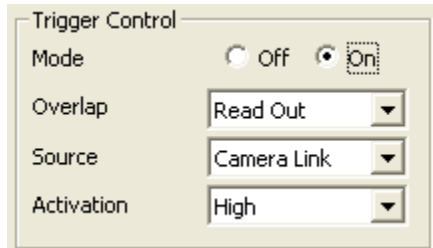

- 7.3.1 Selection of the trigger input (Command: TI)**
 The command “TI” can select the trigger input. At TI=0, the input through Camera Link (line 0) is active and at TI=1, the input through the Hirose 12-pin connector is active. The factory default setting is the Camera Link input.


- 7.3.2 Trigger activation (Command: TA)**
 The command “TA” can select how to activate the trigger.
 TA=0 Rising edge At the rising edge of the pulse, the accumulation and the readout will start.
 TA=1 Falling edge At the falling edge of the pulse, the accumulation and the readout will start.

If Exposure Mode(EM) is set to EM=2 Trigger Width)
 TA=0 High During the high level of trigger, the accumulation is activated and at the low level, the read out is activated.
 TA=1 Low During the low level of trigger, the accumulation is activated and at the high level, the read out is activated.

- 7.3.3 Trigger Overlap (Command: TO)**
 This function sets if a trigger pulse can be accepted while data is being read out or not.
 TO=0 OFF : The trigger pulse is not accepted during CCD readout. This works the same as the LVAL asynchronous mode.
 TO=1 Read Out : The trigger pulse can be accepted during CCD readout. If the trigger pulse is input during CCD readout, it operates as LVAL synchronous and if the trigger is input while the CCD is not being read out, it operates as LVAL asynchronous.

- 7.3.4 Pre-Dump (Command: TD)**
 The pre-dump command has TD=0 (disable) and TD=1 (enable) modes. This command can be used with EM=1 (Timed) and it operates the same as RCT mode. If this mode is “enabled”:
 Until the trigger is input, the camera operates continuously and the video signal for the auto-iris lens is output. When the trigger is input, the fast dump is activated to read out the electronic charge very quickly, after which the accumulation and the readout are performed. When the signal is read out, FVAL , LVAL and DVAL are output too.

7.4. Exposure auto control (Commands: ASC, ASCS, ASCEA, ASCEI)

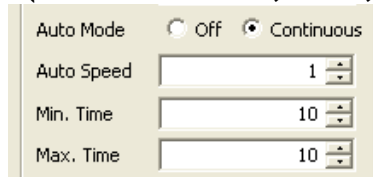

This turns the auto exposure function “ON” or “OFF” and provides settings for various parameters.

ASC=0 (OFF), ASC=1 (ON)

ASCS: ASC tracking speed setting. Range is from 1 to 16 (Default is 8).

ASCEA: Maximum exposure time in the ASC mode. Range is from 10 to 1048575 (μs).

ASCEI: Minimum exposure time in the ASC mode. Range is from 10 to 1048575 (μs).

This function is available for continuous operation and pre-dump ON.

7.5. Normal continuous operation

This is used for applications which do not require triggering. In this mode, the video signal for the auto-iris lens is available.

For the video timing, refer to the chapters 6.2, 6.3 and 6.4.

The frame rate of full pixels readout is 64.2fps for 2 tap output and 32.2fps for 1 tap output.

Primary settings to use this mode

Sensor Digitization Taps: SDT= 0 (Two taps) SDT=1 (One tap)

Acquisition Frame Rate: AR=1~42964

Trigger control

Trigger mode: TM=0 (OFF)

Exposure settings

Exposure mode: EM=1

Exposure time: PE= 10μs ~ 2000000μs

or

Select Auto shutter control(ASC)

Exposure time auto: ASC=1 (ON)

Exposure time auto speed : ASCS= 1~16 (Default is 8)

Exposure time auto max: ASCEA= 10 ~ 1048575(μs unit)

Exposure time auto min: ASCEI= 10 ~ 1048575 (μs unit)

Note: The AM-201CL and AB-201CL are designed to give priority to the frame rate rather than the exposure time. If the exposure time is set at a longer time than 15.56ms (1 frame time), the frame rate must be set at a longer time than the exposure time.

Minimum interval of the image

2 tap output	FULL	2/3 AOI	1/2 AOI	1/4 AOI	1/8 AOI
Minimum frame line	511	415	348	247	196
1 tap output	FULL	2/3 AOI	1/2 AOI	1/4 AOI	1/8 AOI
Minimum frame line	1099	829	694	492	391

Note: The read out area for each AOI is the centered readout (same lines for upper and lower)

7.6. Timed mode (so-called EPS operation)

This mode allows a single image frame to be captured with a preset exposure time by using the external trigger. Additional settings determine if the trigger pulse can be accepted during the exposure period.

The frame rate of full pixels readout is 64.2fps for 2 tap output and 32.2fps for 1 tap output.

Primary settings to use this mode

Sensor Digitization Taps: SDT= 0 (Two taps) SDT=1 (One tap)

Acquisition control

Acquisition frame rate: AR= 1~42964

Exposure control

Exposure mode: EM=1 (Timed)

Exposure time: PE=10 μ s ~ 2000000 μ s

Trigger control

Trigger mode: TM=1 (ON)

Trigger overlap: TO=0 (OFF) or 1=(Readout)

OFF: LVALsync Readout: LVALsync/async automatic setting

Trigger source: TI=0 (Camera Link, default) or 1 (Hirose 12-pin)

Trigger Activation: TA=0 (Rising edge), 1= (Falling edge)


Note : The AM-201CL and AB-201CL prioritize the frame rate over the exposure time. If the exposure time is set at longer than 15.56ms (1 frame period), the frame rate must be increased so that it is longer than the exposure time.

Minimum interval of the trigger pulse

2 tap output	FULL	2/3 AOI	1/2 AOI	1/4 AOI	1/8 AOI
Minimum frame line	552	416	349	248	197
1 tap output	FULL	2/3 AOI	1/2 AOI	1/4 AOI	1/8 AOI
Minimum frame line	1100	830	695	493	392

Note: The read out area for each AOI is the centered readout (same lines for upper and lower)


7.6.1 If the overlap setting is “OFF”

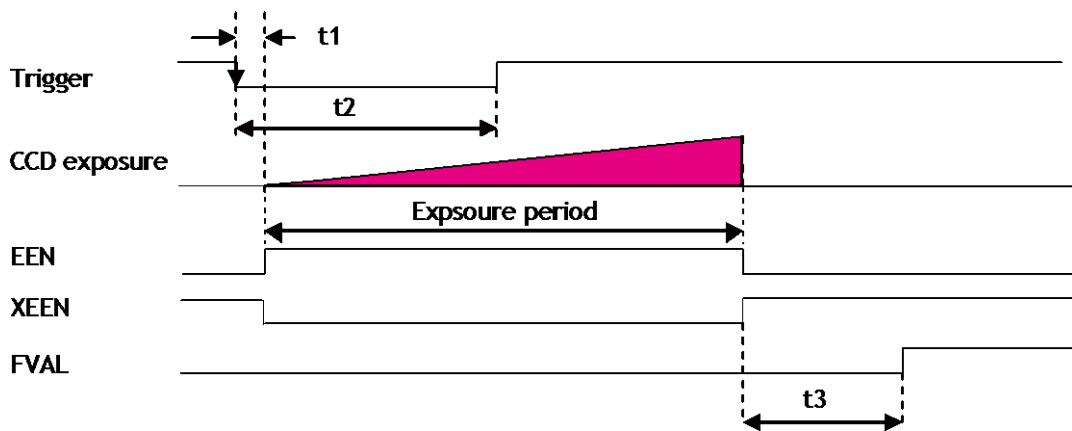

Binning mode	t1	t2	t3
Off, 2 x 1	5.24 μ s \pm 0.05 μ s	2L (min.)	6.5L to 7.5L
1 x 2, 2 x 2	7.96 μ s \pm 0.05 μ s	2L (min.)	6.5L to 7.5L

Fig.31 Non Overlap

7.6.2 If the overlap setting is “Readout”

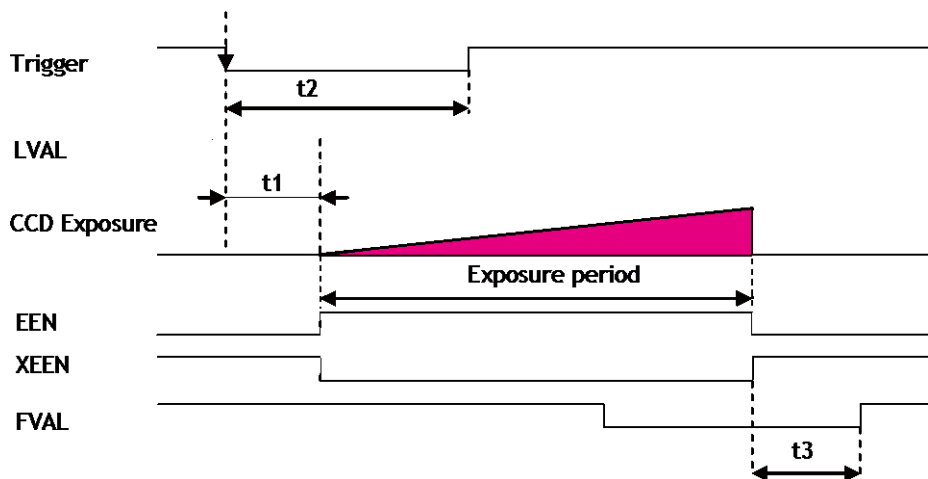

Binning mode	t1	t2	t3
OFF, 2x1	33.4 μ s \pm 0.05 μ s	2L (min.)	4.5L to 6.5L
1x2, 2x2	38.7 μ s \pm 0.05 μ s	2l (min.)	4.5L to 6.5L

Fig.32 Readout

7.7. Trigger width mode (so-called PWC)

In this mode, the exposure time is equal to the trigger pulse width. Accordingly, longer exposure times are supported. Additional settings determine if the trigger pulse can be accepted during the exposure period.

The frame rate of full pixels readout is 64.2fps for 2 tap output and 32.2fps for 1 tap output.

Primary settings to use this mode

Sensor Digitization Taps: SDT= 0 (Two taps) SDT=1 (One tap)

Acquisition control

Acquisition frame rate: AR= 1~42964

Exposure control

Exposure mode: EM=2 (Trigger width)

Trigger control

Trigger mode: TM=1 (ON)

Trigger overlap: TO=0 (OFF) or 1=(Readout)

OFF: LVALsync、 Readout:LVALsync/async automatic setting

Trigger source: TI=0 (Camera Link, default) or 1(Hirose 12-pin)


Trigger Activation: TA=0 (Rising edge), 1= (Falling edge) , 2=(Any edge)

Minimum interval of the trigger pulse

2 tap output	FULL	2/3 AOI	1/2 AOI	1/4 AOI	1/8 AOI
Minimum frame line	552	416	349	248	197
1 tap output	FULL	2/3 AOI	1/2 AOI	1/4 AOI	1/8 AOI
Minimum frame line	1100	830	695	493	392

Note: The readout area for each AOI is the centered readout (same lines for upper and lower)


7.7.1 If the overlap setting is “Non Overlap”

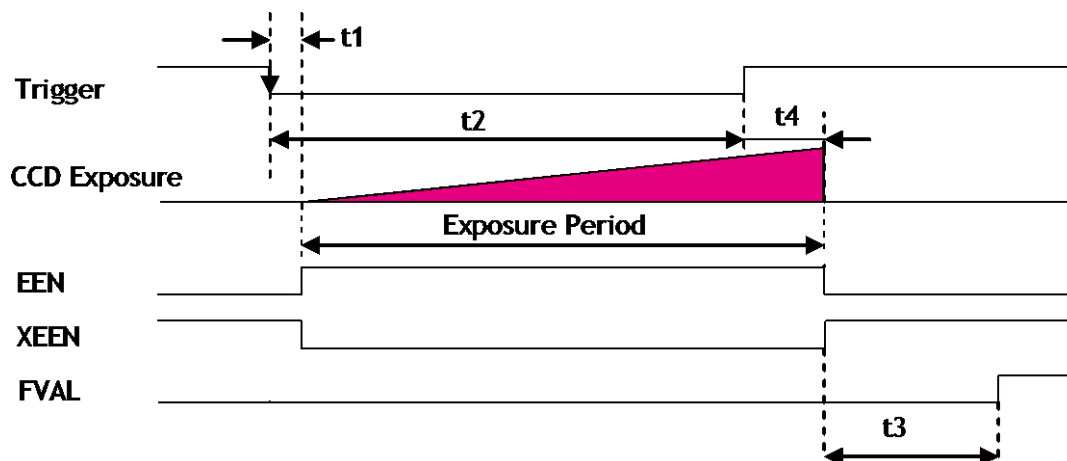

Binning Mode	t1	t2	t3	t4
Off, 2 x 1	5.24μs ± 0.5μs	2L (min.)	6.5L to 7.5L	37.2μs ± 0.05μs
1 x 2, 2 x 2	7.96μs ± 0.5μs	2L (min.)	6.5L to 7.5L	37.2μs ± 0.05μs

Fig.33 Overlap = OFF

7.7.2 If the overlap setting is “Readout”

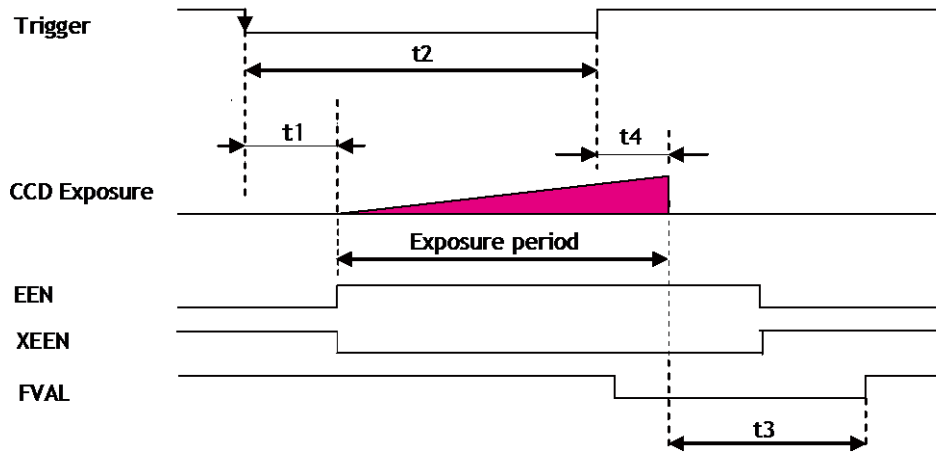

Binning mode	t1	t2	t3	t4
OFF, 2x1	5.24 μ s \pm 0.05 μ s	2L (min.)	6L	65.4 μ s \pm 0.05 μ s
1x2, 2x2	7.96 μ s \pm 0.05 μ s	2L (min.)	6L	68.0 μ s \pm 0.05 μ s

Fig.34 Readout

7.8. Pre-dump mode (so-called RCT)

Until the trigger is input, the camera operates continuously and the video signal for the auto-iris lens is output. At this moment, the video signal, FVAL and LVAL are output but DVAL is not output. When the trigger is input, the fast dump is activated to read out the electronic charge very quickly, after which the accumulation and the readout are performed. This fast dump period is 5.275ms (in the case of Binning OFF). When the accumulated signal against the trigger is read out, FVAL, LVAL and DVAL are output too. The frame rate for full pixels readout is;

2 tap output: 64.2fps + Fast dump period + Exposure time
 1 tap output: 32.2fps + Fast dump period + Exposure time

Primary settings to use this mode

Sensor Digitization Taps: SDT= 0 (Two taps) SDT=1 (One tap)

Acquisition control

Acquisition frame rate: AR= 1~42964

Exposure mode: EM=1 (Timed)

Auto mode: ASC=1 (Continuous)

Pre-dump: TD=1 (Dump ON)


Note : The AM-201CL and AB-201CL gives priority to the frame rate over the exposure time. If the exposure time is set at longer than 16.64ms (1 frame period), the frame rate must be increased so that it is longer than the exposure time.

Minimum interval of the trigger pulse

2 taps output	FULL	2/3 AOI	1/2 AOI	1/4 AOI	1/8 AOI
Minimum frame line	1161	1025	958	857	806
1 tap output	FULL	2/3 AOI	1/2 AOI	1/4 AOI	1/8 AOI
Minimum frame line	1709	1439	1304	1102	1001

Note: The read out area for each AOI is the centered readout (same lines for upper and lower)

Note: The minimum frame rate figures in the above table do not include the exposure time.

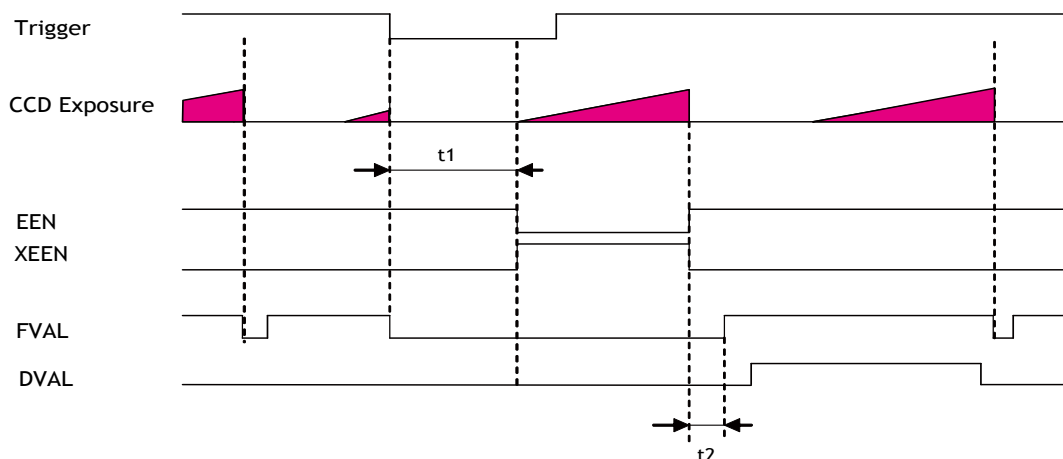

Binning Mode	t1	t2
Off, 2 x 1	5.275ms	6.5L to 7.5L
1 x 2, 2 x 2	5.277ms	6.5L to 7.5L

Fig.35 Pre-dump mode timing

7.9. PIV (Particle Image Velocimetry)

The Particle Image Velocimetry mode can be used in applications where 2 images should be taken with a very short time interval. It can only be used with strobe flash as illumination. The first accumulation time is 10µsec to 15.56ms (in the case of 2 tap and Binning OFF). Then, the second exposure will be taken. The accumulation is LVAL asynchronous. The first strobe is activated during the first exposure duration and the second strobe is taken while the first frame is being read out. In this way, two strobe flashes generate two video outputs.

The frame rate for full pixels readout is 32.1fps for 2 tap output and 16.1fps for 1 tap output.


Primary Settings

Sensor Digitization Taps: SDT= 0 (Two taps) SDT=1 (One tap)

Exposure mode : Timed

PIV control : ON

Trigger mode: TM=1 (ON)

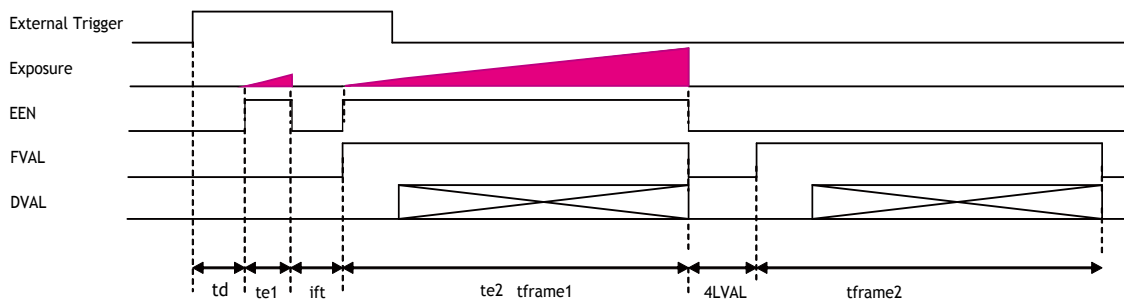

Timing specifications for 2 tap output

time name	description	Time	
		Binnig Control Off , 2x1	Binnig Control 1x2 , 2x2
td	Exposure beginning delay	5.24us	7.96us
te1	First exposure time period	10us ~ 15.56ms	10us ~ 8.65ms
te2	Second exposure time	15.56ms (frame rate)	8.65ms (frame rate)
itf	Interframing time	5.97us	5.97us
tframe1	First Frame read out	15.42ms max	8.50ms max
tframe2	Second Frame read out	15.42ms max	8.50ms max

Timing specifications for 1 tap output

time name	description	Time	
		Binnig Control Off , 2x1	Binnig Control 1x2 , 2x2
td	Exposure beginning delay	5.24us	7.96us
te1	First exposure time period	10us ~ 31.04ms	10us ~ 17.21ms
te2	Second exposure time	31.04ms (frame rate)	17.21ms (frame rate)
itf	Interframing time	5.97us	5.97us
tframe1	First Frame read out	30.67ms max	16.81ms max
tframe2	Second Frame read out	30.67ms max	16.81ms max

Fig.36 PIV mode

7.10. Operation and function matrix

Operation mode	Exposure control	Exposure auto	Binning	AOI	Auto Iris output	Overlap	Note
Continuous	○	○	○	○	○	---	
Timed (EPS)	○	×	○	○	×	○	
Trigger width(PWC)	---	×	○	○	×	○	
Pre-Dump (RCT)	○	○	○	○	○	OFF	
JAI_PIV	○	×	○	○	×	OFF	
Exposure Sequence	○	×	○	○	×	OFF	

8. Other functions

8.1 Black level control (Command : BL)

This function adjusts the setup level.

Command value : -1024 to 1023

Variable range : -256 to 255 LSB (at 10-bit output)

8.2 Gain control (Relative commands GA,GJUT1,2,3)

The AM-201CL can adjust the gain level from -3dB to +24dB using 0dB as the reference (Factory default). In the AB-201CL, the master gain can be adjusted from 0dB to +24dB and R and B gains can be adjusted in the range of -7dB to + 10dB using the master gain as the reference.

The AM-201CL and AB-201CL has the resolution of x0.00012/step using both analog gain (0.00359db/step) and digital gain. In the AB-201CL, blue and red channels can adjust in x0.00012/step by using digital gain.

Refer to the following drawing.

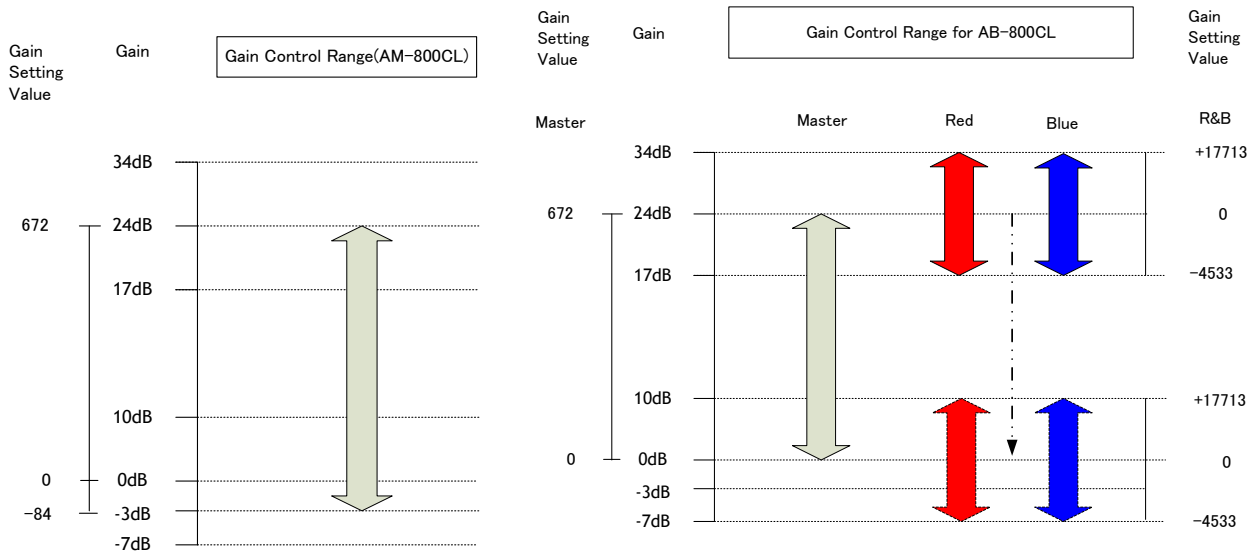


Fig. 37 Gain control

8.3 Tap control (Relative commands AWA, ABA, GJUT1, GJUT2, GJUT3)

The Tap control function adjusts automatically or manually the OFFSET and the gain differences between the upper and lower taps, and the right and left taps. The sensor used in the AM-201CL and AB-201CL divides the effective image area into 4 (four) areas as shown in the figure 30 in order to achieve its fast frame rate.

The reference tap for all adjustments is Tap "A".

AWA: Adjust the differences of the gain among taps automatically

ABA: Adjust the differences of the OFFSET among taps automatically


GJUT1: Adjust the gain of the TAP1R(B) manually

GJUT2: Adjust the gain of the TAP2L(C) manually

GJUT3: Adjust the gain of the TAP2R(D) manually

Note: 1) The OFFSET cannot be adjusted individually.

2) TAP A cannot be adjusted individually.

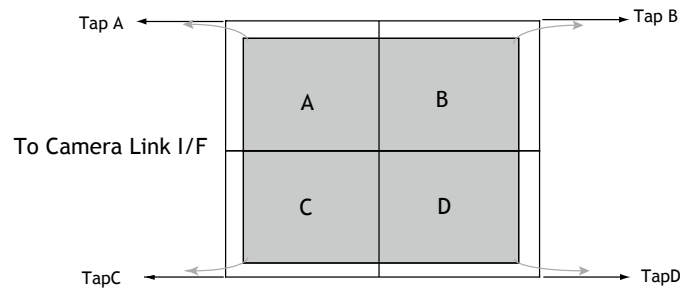

Note: If 1 tap output is used, the following readout is applied.

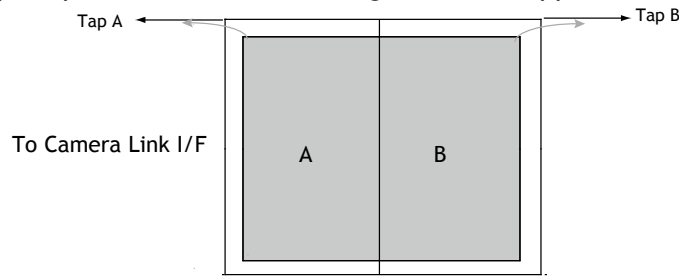


Fig.38 Tap control

8.4. Exposure auto (Related Commands : ASC=1(ON), ASCS, ASCEA, ASCEI)

The exposure can be automatically controlled by setting the command ASC to ON. The adjusting range is 15.56ms to 10 μ s. The tracking speed can also be set.

	Command	Value
Adjusting range	ASCEA, ASCEI	10 μ s to 15.56ms
Tracking speed	ASCS	1 to 16 (Default:8)

ASCEA: Sets the maximum exposure in the ASC mode

ASCEI: Sets the minimum exposure in the ASC mode

Note: This function works only in Continuous mode or Pre-dump mode.

8.5. Auto white balance (Related commands:AWB, PGS, PGR, PGGR, PGGB, PGB)

In this function, the gain of each R, Gr, Gb and B color can be individually adjusted to get the proper white balance.

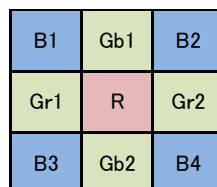


Fig. 39 Auto white balance

To adjust white balance, the AB-201CL has three methods: manual adjustment, one-push auto white balance, and continuous auto white balance.

- AWB: 0 OFF (Manual adjustment)
- 1 Once (One-push auto white balance)
- 2 Continuous (always tracking)

This function can be used with full resolution readout, as well as with AOI readout. This does not work in trigger mode.

8.6. Blemish compensation

The AM-201CL and AB-201CL have a blemish compensation circuit. This function compensates blemishes on the CCD sensor (typically pixels with extremely high response or extremely low response). This applies to both monochrome and color versions. Pixels that fulfill the blemish criteria can be compensated by adjacent pixels on both columns and, in the case of the AB-201CL, the defective pixels can be compensated by the same Bayer color pixels in both adjacent columns. The number of pixels that can be compensated is up to 64 pixels per tap, for a total of 256 pixels.

The built-in compensation circuit for the AM-201CL and AB-201CL uses compensation data collected in the factory and can be turned ON or OFF. The default setting is OFF.

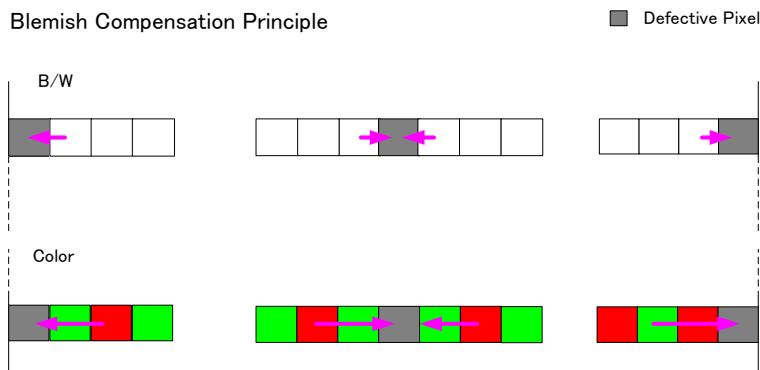


Fig. 40 Blemish compensation

Note: If defective pixels are found consecutively in the horizontal direction, the blemish compensation circuit does not work.

8.7. LUT (Relative commands LUTC, LUTR, LUYG, LUTB)

This function can be used to convert the input to the desired output characteristics. The Look-Up Table (LUT) has 256 points for setup and each point has an 8-bit gain value. The output level can be created by multiplying the gain data by the input level. In the AB-201CL, the same LUT characteristic is applied independent of the color value. If input data is not in the LUT, the weighted mean average data from upper point and the lower point are used.

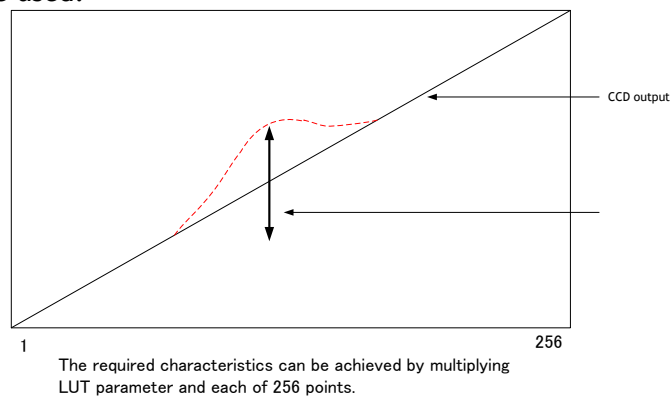


Fig.41 LUT concept drawing

8.8. Gamma (Command: GAMS)

This command is used for the fine tuning of the set gamma characteristics if the gamma is set to 0.45 or 0.6. The parameter of GAMS is 0 to 31 and the default is 16. If GAMS is 16 (default), the normal 0.45 or 0.6 gamma curve is unaffected. By changing the value of GAMS, the 0.45 or 0.6 gamma curve can be modified.

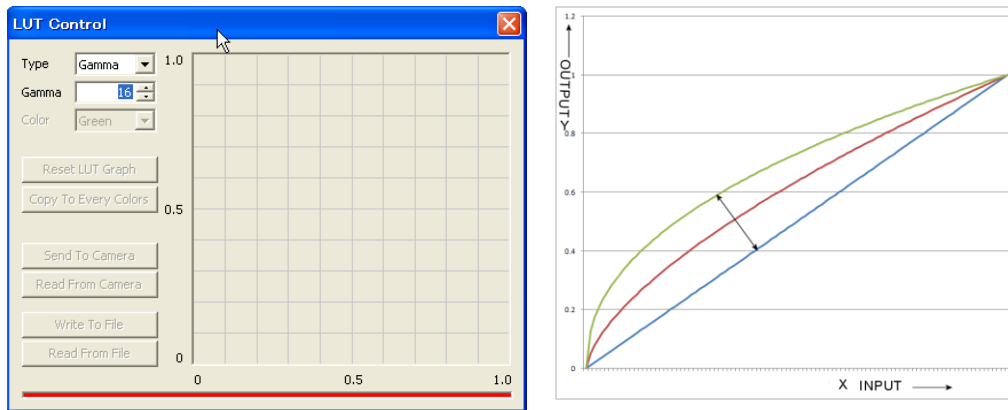


Fig. 42 Gamma compensation

8.9. Flat Field Correction (FFC) (Command: SDR)

This function compensates for shading caused by the lens or the light source used. The method to compensate the shading is to measure the highest luminance level in the image and use that data as the reference. Luminance levels of other areas are then adjusted so that the level of the entire area is equal. The block for compensation is 64 pixels x 64 pixels and the complementary process is applied to produce the compensation data with less error.

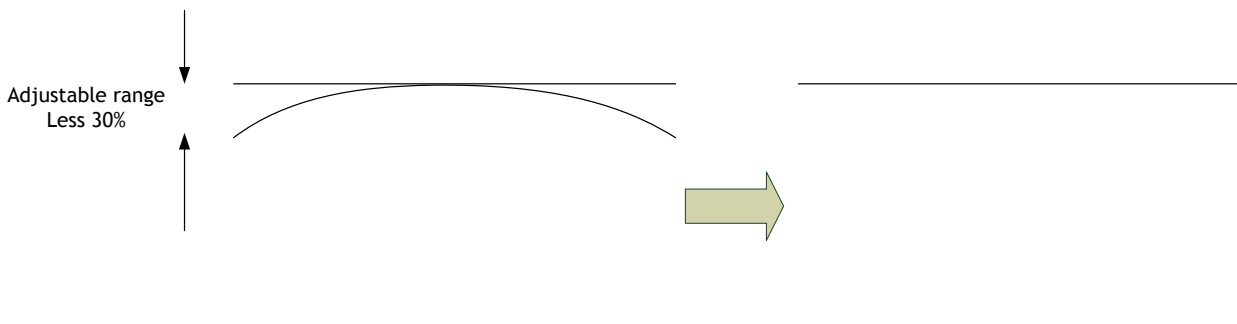


Fig. 43 FFC compensation concept drawing

Note: Under the following conditions, the FFC circuit may not work properly.

- If there is some area in the image with a video level less than 70%
- If part of the image or the entire image is saturated
- If the highest video level in the image is less than 300LSB (at 10-bit output)

SDM: 0=OFF, 1=Factory (Use factory data), 2=User (User setting data)

To generate user data for setting FFC:

Execute the command RS (FFC re-calibration) and store the result in the user area.

8.10. Bayer color interpolation (Command : BCIC) (Only for AB-201CL)

This function is available only for AB-201CL. The AB-201CL uses a CCD with an RGB Bayer pattern. If the Bayer color interpolation is not used, the following RAW data can be output.

B	Gb	B	Gb	B	Gb	B	Gb	B	Gb
Gr	R	Gr	R	Gr	R	Gr	R	Gr	R
B	Gb	B	Gb	B	Gb	B	Gb	B	Gb
Gr	R	Gr	R	Gr	R	Gr	R	Gr	R

Fig.44 Bayer pattern

The RAW data contains only luminance information for each color and outputs as a monochrome signal. The Bayer color interpolation can complement lacking color information on each pixel and output RGB color data as the result. Color interpolation compensates for the lack of color information by using information from adjacent pixels. The following is the concept drawing for the color interpolation process.


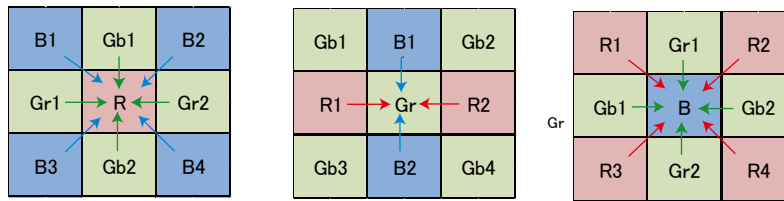


Fig.45 Color interpolation concept drawing


8.11. Test pattern (Command: TPN)

TPN=0 : Test pattern off


TPN=1 : AM-800:Black-White

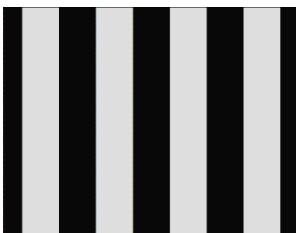


AB-800: Color bar

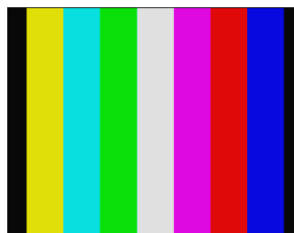

TPN=2 Gray Pattern1

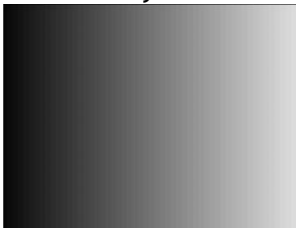

TPN=3: Gray Pattern2

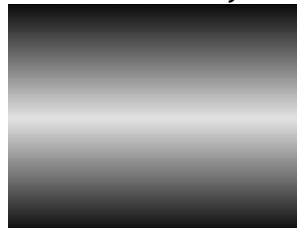

TPN=4: white (100%)

 


Fig.46 Test pattern

8.12. Temperature sensor (Command : TMPO)

This function reads out the temperature inside the camera.
 The measuring range : -55 to +125°C
 Resolution : 0.0625 °C

The following table shows examples of values which can be read out by the TMPO command.

TEMPERATURE (°C)	DIGITAL OUTPUT ⁽¹⁾ (BINARY)	HEX
150	0100 1011 0000 0111	4B07
125	0011 1110 1000 0111	3E87
25	0000 1100 1000 0111	0C87
0.0625	0000 0000 0000 1111	000F
0	0000 0000 0000 0111	0007
-0.0625	1111 1111 1111 1111	FFFF
-25	1111 0011 1000 0111	F387
-55	1110 0100 1000 0111	E487

The display resolution in the JAI camera control tool is 1 °C.

8.13 ALC

In the AM-201CL and AB-201CL, auto gain, auto shutter and auto iris functions can be combined to provide a wide ranging automatic exposure control from dark to bright or vice versa.

The functions are applied in the sequence shown below and if one function is disabled, the linkage between the other two is maintained.

If the lighting condition is changed from bright to dark AIC – ASC – AGC
 If the lighting condition is changed from dark to bright AGC – ASC – AIC

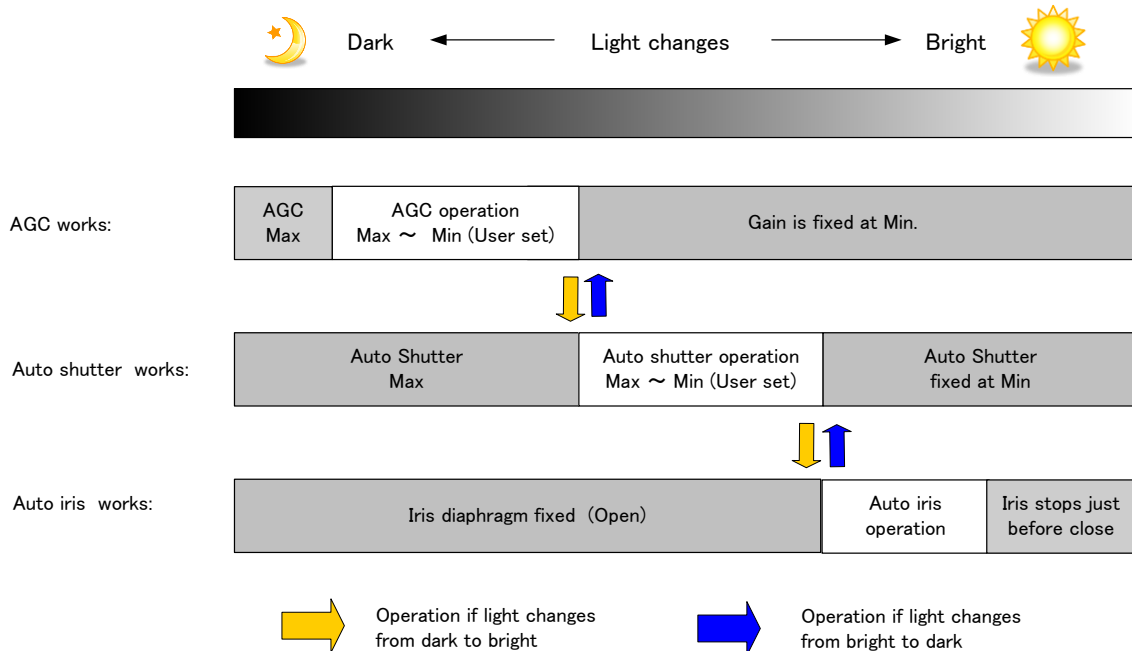


Fig.47 ALC function concept

Gain Auto Reference will determine the target video level for AGC, Auto Shutter and/or Auto iris. For instance, if Gain Auto Reference is set to 100% video level, AGC, Auto Shutter and/or Auto iris will function to maintain 100% video level.

■ Please note that ALC function is available only for the continuous mode.



9. Configuring the camera

9.1 RS-232C control


All configuration of the AM-201CL and AB-201CL cameras are done via Camera Link. The camera can be set up from a PC running terminal emulator software, or using JAI's camera control software.

Below is the description of the ASCII based short command protocol.

9.2 Communication setting.

Baud Rate	9600 bps
Data Length	8 bit
Start Bit	1 bit
Stop Bit	1 bit
Parity	None
Xon/Xoff Control	None

RS 232C cable

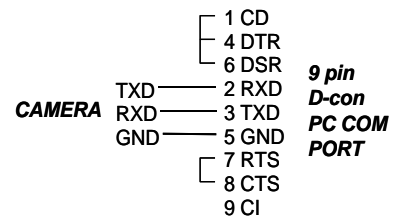

Protocol.

Transmit setting to camera:

NN=[Parameter]<CR><LF> (NN is any kind of command. Capital or small letters.)

The camera answers:

COMPLETE<CR><LF>

Note: Some commands can only be requested.

Transmit request command to camera:

NN?<CR><LF> (NN is any kind of command.)

The camera answers:

NN=[Parameter]<CR><LF>

Transmit the following to have the camera's actual settings:

ST?<CR><LF>

The camera answers:

A complete list of the current settings

Transmit the following to have a command list:

HP?<CR><LF>

The camera answers:

A list with all commands and possible settings

Invalid parameters sent to camera: (99 is an invalid parameter)

SH=99<CR><LF>

The camera answers:

02 Bad Parameters!!<CR><LF>

To see firmware number.

VN?<CR><LF>

To see camera ID. It shows the manufacturing lot number.

ID?<CR><LF>

9.3. Save and load functions

The following commands are for storing and loading camera settings in the camera EEPROM.

Load settings. LD.

This command will load previously stored settings to the camera. 3 user settings can be stored in the camera EEPROM. 1 factory setting is also stored in the camera. The settings stored in the last used user area are used as default settings at power up.

Save Settings. SA.

This command will store the actual camera settings to 1 of the 3 user areas in the camera EEPROM.

EEPROM Area. EA.

If received, the camera will return the last used user area number.

9.4 Command list

	Command Name	Format	Parameter	Remarks
A - General settings and utility commands.				
1	Camera Status Request	ST? <CR><LF>		Actual setting
2	Online Help Request	HP? <CR><LF>		Command list
3	Firmware Version	VN? <CR><LF>		3 digits (e.g) 100 = Version 1.00
4	Camera ID Request	ID? <CR><LF>		max 12 characters
5	Model Name Request	MD? <CR><LF>		max 12 characters
6	User ID	UD =[Param.]<CR><LF> UD? <CR><LF>		User can save and load free text.(12 or less characters)
7	Error code	ERRER =[Param.]<CR><LF> > ERRER? <CR><LF>	One of following values will be replied from the camera 0=One-Push has not been finished yet. 1=Succeeded. 2=Error1. Green image was too bright. 3=Error2. Green image was too dark. 4=Error3. Timeout-error occurred.	
B – Image format control				
1	Height	ETL =[Param.]<CR><LF> ETL? <CR><LF>	SC=1: :2 to1080	AB-201 : 2Line step AM-201 : 1Line step
2	Offset Y	STL =[Param.]<CR><LF> STL? <CR><LF>	SC=1: :1 to 1079	AB-201 : 2Line step AM-201 : 1Line step
3	Binning Vertical	BNC =[Param.]<CR><LF>	0=off	Only AM-201CL

	Command Name	Format	Parameter	Remarks
		BNC?<CR><LF>	1=1x2, 2=2x1 3=2x2	
4	PixelFormat	BA=[Param.]<CR><LF> BA?<CR><LF>	0=8bit, 1=10bit, 2=12bit, 3=RGB	
5	Sensor Digitization Taps	SDT=[Param.]<CR><LF> SDT?<CR><LF>	0=Two, 1=One	
C – Test image selector				
1	Test Image selector	TPN=[Param.]<CR><LF> TPN?<CR><LF>	0=OFF 1=Color bar (AB-xxx) / Black-White (AM-xxx) 2= Gray horizontal ramp 3= Gray Vertical ramp 4= White	
D – Acquisition control				
1	Acquisition Frame Rate	AR=[Param.]<CR><LF> AR?<CR><LF>	1 to 1048575	In JAI control tool, 42964 is upper limit.
E – Trigger control				
1	Trigger Mode	TM=[Param.]<CR><LF> TM?<CR><LF>	0=off 1=on	
2	Trigger source	TI=[Param.]<CR><LF> TI? <CR><LF>	0= Line0(Camera Link) 1= Line1(Hirose 12pin)	
3	Trigger Activation	TA=[Param.]<CR><LF> TA? <CR><LF>	0= Rising edge 1=Falling edge 2=High 3=Low	
4	Trigger overlap	TO=[Param.]<CR><LF> TO?<CR><LF>	0= off 1= Read out	
F – Exposure control				
1	Exposure Mode	EM=[Param.]<CR><LF> EM?<CR><LF>	0=OFF 1=Timed 2=Trigger width	
2	Exposure time	PE=[Param.]<CR><LF> PE?<CR><LF>	10µs ~ 2000000µs	Available when EM=1,2
3	ExposureAuto	ASC=[Param.]<CR><LF> ASC?<CR><LF>	0=off, 1=Continuous	
4	ExposureAuto speed	ASCS=[Param.]<CR><LF> ASCS?<CR><LF>	1 to 16	ASC Tracking speed setting, Default=8
5	ExposureAuto Max	ASCEA=[Param.]<CR><LF> > ASCEA?<CR><LF>	10 to 1048575 us unit	Maximum Exposure value when ASC is 1
6	ExposureAuto	ASCEI=[Param.]<CR><LF>	10 to 1048575 us unit	Minimum Exposure

AM-201CL / AB-201CL

	Command Name	Format	Parameter	Remarks
	Min	> ASCEI?<CR><LF>		value when ASC is 1
7	Pre Dump	TD=[Param.]<CR><LF> TD? <CR><LF>	0= Dump off 1=Dump on	
G – Analog control				
1	GainAnalog All	GA=[Param.]<CR><LF> GA?<CR><LF>	-84 to 672 (AM-201CL) 0 to 672 (AB-201CL)	for AFE 1L, 1R, 2L, 2R
2	FineGain Digital All	FGA=[Param.]<CR><LF> FGA?<CR><LF>	-2393~3379 (Data+8192)/ 8192 ±3dB	for AFE 1L, 1R, 2L, 2R
3	Gain Auto	AGC=[Param.]<CR><LF> AGC?<CR><LF>	0=OFF 1=Continuous	
4	Gain Auto Reference	AGCF=[Param.]<CR><LF> AGCF?<CR><LF>	0 to 8192	
5	Gain Auto speed	AGCS=[Param.]<CR><LF> AGCS?<CR><LF>	1 to 16	AGC tracking speed Setting ,Default=8
6	Gain Auto Maximum gain value	AGCGA=[Param.]<CR><LF> AGCGA?<CR><LF>	0 to 672 (AM-201CL) 84 to 672 (AB-201CL)	
7	Gain Auto Minimal gain value	AGCGI=[Param.]<CR><LF> > AGCGI?<CR><LF>	-84 to 588 (AM-201CL) 0 to 588 (AB-201CL)	
8	Black Level	BL=[Param.]<CR><LF> BL?<CR><LF>	-1024 to 1023	Digital User Setup Master
H – Balance Ratio				
1	BalanceRatio RED	PGR=[Param.]<CR><LF> PGR?<CR><LF>	-4533~17713 (Data+8192)/ 8192 -7~+10dB	(Only AB-201CL) Pixel Gain for WB
2	BalanceRatio Blue	PGB=[Param.]<CR><LF> PGB?<CR><LF>	-4533~17713 (Data+8192)/ 8192 -7~+10dB	(Only AB-201CL) Pixel Gain for WB
3	Blance White auto	AWB=[Param.]<CR><LF>	0=OFF 1=Once (Run) 2=Continuous	Only AB-201CL
4	Request the Result of Blance white auto	AWRS?<CR><LF>	0=Complete. 1=Too Bright. 2=Too dark. 3=Timeout Error. 4=Busy. 5=Limit. 6= Trig is not set as Normal.	Only AB-201CL

	Command Name	Format	Parameter	Remarks
I – LUT control				
1	LUT selector	LUTC=[Param.]<CR><LF> LUTC?<CR><LF>	0=off 1=Gamma 2=LUT	
2	Gamma Selector	GAMS=[Param.]<CR><LF> > GAMS?<CR><LF>	0 to 16	(Only Gamma)
3	LUT data communication for Red	LUTR=[Param.]<CR><LF> LUTR?<CR><LF>	transfer by a serial method. The number of the data is 512. Param=0 to 8191	After sending consecutive 512 data, LUT data can be renewed
4	LUT data communication for Green	LUTG=[Param.]<CR><LF> LUTG?<CR><LF>	transfer by a serial method. The number of the data is 512. Param=0 to 8191	After sending consecutive 512 data, LUT data can be renewed
5	LUT data communication for Blue	LUTB=[Param.]<CR><LF> LUTB?<CR><LF>	transfer by a serial method. The number of the data is 512. Param=0 to 8191	After sending consecutive 512 data, LUT data can be renewed
J – Gain and black level for TAP balance				
1	Gain auto Tap Balance	AWA=[Param.]<CR><LF>	0=OFF 1=Once (Run) 2=Continuous	
2	Request the Result of Gain auto Tap balance	WBRS?<CR><LF>	0=Complete. 1=Too Bright. 2=Too dark. 3=Timeout Error. 4=Busy. 5=Limit. 6= Trig is not set as Normal.	
3	Fine Gain for Tap 2	GJUT2=[Param.]<CR><LF> > GJUT2?<CR><LF>	-891 ~ 1000 (Data+8192)/ 8192 ± 1dB	for pixel Gain 1R
4	Fine Gain for Tap 3	GJUT3=[Param.]<CR><LF> > GJUT3?<CR><LF>	-891 ~ 1000 (Data+8192)/ 8192 ± 1dB	for pixel Gain 2L
5	Fine Gain for Tap 4	GJUT4=[Param.]<CR><LF> > GJUT4?<CR><LF>	-891 ~ 1000 (Data+8192)/ 8192 ± 1dB	for pixel Gain 2R
6	PixelGain RED Tap2	PGR2=[Param.]<CR><LF> PGR2?<CR><LF>	-891 ~ 1000 (Data+8192)/ 8192 ± 1dB	(Only AB-201CL) Pixel Gain for Tap2

AM-201CL / AB-201CL

	Command Name	Format	Parameter	Remarks
7	Pixel Gain Blue Tap2	PGB2=[Param.]<CR><LF> PGB2?<CR><LF>	-891~1000 (Data+8192)/ 8192 ±1dB	(Only AB-201CL) Pixel Gain for Tap2
8	Pixel Gain RED Tap3	PGR3=[Param.]<CR><LF> PGR3?<CR><LF>	-891~1000 (Data+8192)/ 8192 ±1dB	(Only AB-201CL) Pixel Gain for Tap3
9	Pixel Gain Blue Tap3	PGB3=[Param.]<CR><LF> PGB3?<CR><LF>	-891~1000 (Data+8192)/ 8192 ±1dB	(Only AB-201CL) Pixel Gain for Tap3
10	Pixel Gain RED Tap4	PGR4=[Param.]<CR><LF> PGR4?<CR><LF>	-891~1000 (Data+8192)/ 8192 ±1dB	(Only AB-201CL) Pixel Gain for Tap4
11	Pixel Gain Blue Tap4	PGB4=[Param.]<CR><LF> PGB4?<CR><LF>	-891~1000 (Data+8192)/ 8192 ±1dB	(Only AB-201CL) Pixel Gain for Tap4
12	Black level auto Tap balance	ABA=[Param.]<CR><LF>	0=OFF 1=Once (Run) 2=Continuous	
13	Request the Result of Black level auto Tap balance	BBRS?<CR><LF>	0=Complete. 1=Too Bright. 2=Too dark. 3=Timeout Error. 4=Busy. 5=Limit. 6= Trig is not set as Normal.	
14	Fine Black for tap 2	BL2=[Param.]<CR><LF> BL2?<CR><LF>	-512 to 511	Tap2 Black Fine For User
15	Fine Black for tap 3	BL3=[Param.]<CR><LF> BL3?<CR><LF>	-512 to 511	Tap3 Black Fine For User
16	Fine Black for tap 4	BL4=[Param.]<CR><LF> BL4?<CR><LF>	-512 to 511	Tap4 Black Fine For User
17	BayerPixel FineBlack for tap 1L-R	BLR1=[Param.]<CR><LF> BLR1?<CR><LF>	-512 to 511	Tap1 Black Fine For User
18	BayerPixel FineBlack for tap 1L-B	BLB1=[Param.]<CR><LF> BLB1?<CR><LF>	-512 to 511	Tap1 Black Fine For User
19	BayerPixel FineBlack for tap 1R-R	BLR2=[Param.]<CR><LF> BLR2?<CR><LF>	-512 to 511	Tap2 Black Fine For User

	Command Name	Format	Parameter	Remarks
20	BayerPixel FineBlack for tap 1R-B	BLB2 =[Param.]<CR><LF> BLB2?<CR><LF>	-512 to 511	Tap2 Black Fine For User
21	BayerPixel FineBlack for tap 2L-R	BLR3 =[Param.]<CR><LF> BLR3?<CR><LF>	-512 to 511	Tap3 Black Fine For User
22	BayerPixel FineBlack for tap 2L-B	BLB3 =[Param.]<CR><LF> BLB3?<CR><LF>	-512 to 511	Tap3 Black Fine For User
23	BayerPixel FineBlack for tap 2R-R	BLR4 =[Param.]<CR><LF> BLR4?<CR><LF>	-512 to 511	Tap4 Black Fine For User
24	BayerPixel FineBlack for tap 2R-B	BLB4 =[Param.]<CR><LF> BLB4?<CR><LF>	-512 to 511	Tap4 Black Fine For User
K - Blemish				
1	Blemish Reduction	BLM =[Param.]<CR><LF> BLM?<CR><LF>	0=off, 1=Black, 2=White, 3=Both	
2	ReCalibrate Blemish	BMRC =[Param.]<CR><LF>	Param : 2=White	
3	Blemish Threshold White	BMTHW =[Param.]<CR><L F> BMTHW?<CR><LF>	0 to 16383	
4	BLMP White H	BMWH =[Param1],[Param2 <CR><LF> BMH?[Param1]<CR><LF>	Param1 : Blemish No. 1 to 256 Param2 : H position	
5	BLMP White V	BMWV =[Param1],[Param2 <CR><LF> BMV?[Param1]<CR><LF>	Param1 : Blemish No. 1 to 256 Param2 : V position	
L – ALC control				
1	Auto Iris Lens Control Signal output	AIC =[Param.]<CR><LF> AIC?<CR><LF>	0=off, 1=on	
2	Iris Reverse Gain	IRRG =[Param.]<CR><LF>	0=ON 1=OFF	
3	Iris State Control	IRSC =[Param.]<CR><LF>	0=Video 1=Close 2=Open	
4	Iris Sync Level	IRSL =[Param.]<CR><LF>	0 to 255	
5	Channel area	CHA =[Param.]<CR><LF> CHA?<CR><LF>	1=Low Right; 2=Low Center; 3=Low Left; 4=Middle Right;	

AM-201CL / AB-201CL


	Command Name	Format	Parameter	Remarks
			5=Middle Center; 6=Middle Left; 7=High Right; 8=High Center; 9=High Left;	
M – Flat field correction				
1	Flat Field Correction Control	SDM =[Param.]<CR><LF> SDM?<CR><LF>	0=Off, 1=Factory, 2=User	
2	Recalibrate FFC	RS =[Param1]<CR><LF>	0 Only	Save User Area
3	Request the Result of FFC	SDRS?<CR><LF>	0=Complete. 1=Too Bright. 2=Too dark. 3=Timeout Error. 4=Busy. 5=Limit. 6= Trig is not set as Normal.	
N - Others				
1	Temperature	TMP0?<CR><LF>	0 to 0xFFFF8 (/ 128 → °C)	
2	Noise Reject SW	NR =[Param.]<CR><LF> NR?<CR><LF>	0=off, 1=on	
O – Sequence exposure control operation				
1	Exposure Sequence	EXSQ =[Param.]<CR><LF> EXSQ?<CR><LF>	0=OFF 1=ON	Available when EM=1,2
2	Exposure Sequence No N (1 ~ 16)	PES(N) =[Param.]<CR><LF> PES(N)?<CR><LF>	0 ~ 15	
3	Exposure Repeat Time N (1 ~ 16)	PER(N) =[Param.]<CR><LF> PER(N)?<CR><LF>	0 ~ 15	
4	Exposure Sequence Reset	EXSR =[Param.]<CR><LF> EXSR?<CR><LF>	0=OFF 1=ON	Effective when EXSQ=1. Only command 1 is used. In the firmware, 1 is immediately turned to 0.
5	Exposure Sequence End Point	EXSEP =[Param.]<CR><LF> EXSEP?<CR><LF>	0=OFF 1=ON	Effective when EXSQ=1. Only command 1 is used. In the firmware, 1 is immediately turned to 0.

	Command Name	Format	Parameter	Remarks
6	Exposure time 1	PE1=[Param.]<CR><LF> PE1?<CR><LF>	10μs ~ 2000000μs	Available when EXSQ=1
7	Exposure time 2	PE2=[Param.]<CR><LF> PE2?<CR><LF>	10μs ~ 2000000μs	Available when EXSQ=1
8	Exposure time 3	PE3=[Param.]<CR><LF> PE3?<CR><LF>	10μs ~ 2000000μs	Available when EXSQ=1
9	Exposure time 4	PE4=[Param.]<CR><LF> PE4?<CR><LF>	10μs ~ 2000000μs	Available when EXSQ=1
10	Exposure time 5	PE5=[Param.]<CR><LF> PE5?<CR><LF>	10μs ~ 2000000μs	Available when EXSQ=1
11	Exposure time 6	PE6=[Param.]<CR><LF> PE6?<CR><LF>	10μs ~ 2000000μs	Available when EXSQ=1
12	Exposure time 7	PE7=[Param.]<CR><LF> PE7?<CR><LF>	10μs ~ 2000000μs	Available when EXSQ=1
13	Exposure time 8	PE8=[Param.]<CR><LF> PE8?<CR><LF>	10μs ~ 2000000μs	Available when EXSQ=1
14	Exposure time 9	PE9=[Param.]<CR><LF> PE9?<CR><LF>	10μs ~ 2000000μs	Available when EXSQ=1
15	Exposure time 10	PE10=[Param.]<CR><LF> PE10?<CR><LF>	10μs ~ 2000000μs	Available when EXSQ=1
16	Exposure time 11	PE11=[Param.]<CR><LF> PE11?<CR><LF>	10μs ~ 2000000μs	Available when EXSQ=1
17	Exposure time 12	PE12=[Param.]<CR><LF> PE12?<CR><LF>	10μs ~ 2000000μs	Available when EXSQ=1
18	Exposure time 13	PE13=[Param.]<CR><LF> PE13?<CR><LF>	10μs ~ 2000000μs	Available when EXSQ=1
19	Exposure time 14	PE14=[Param.]<CR><LF> PE14?<CR><LF>	10μs ~ 2000000μs	Available when EXSQ=1
20	Exposure time 15	PE15=[Param.]<CR><LF> PE14?<CR><LF>	10μs ~ 2000000μs	Available when EXSQ=1
21	Exposure time 16	PE15=[Param.]<CR><LF> PE14?<CR><LF>	10μs ~ 2000000μs	Available when EXSQ=1
P - Saving and loading data in EEPROM				
1	Load Settings (from Camera EEPROM)	LD=[Param.]<CR><LF>	0=Factory area 1=User 1 area 2=User 2 area 3=User 3 area	Latest used DATA AREA becomes default at next power up.
2	Save Settings (to Camera EEPROM)	SA=[Param.]<CR><LF>	1=User 1 area 2=User 2 area 3=User 3 area Note : parameter 0 is not allowed	

AM-201CL / AB-201CL

	Command Name	Format	Parameter	Remarks
3	EEPROM Current Area No Request.	EA?<CR><LF>	0=Factory area 1=User 1 area 2=User 2 area 3=User 3 area	The camera returns the latest used DATA AREA.

10. Camera control tool

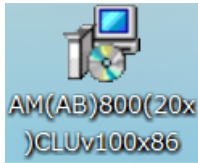

The AM-201CL and AB-201CL camera Control Tool can be downloaded from JAI Web site www.jai.com. This control software is available for Windows2000/XP/Vista/7. In this control tool, the developers guide is included in order for customers to create their own programs.

10.1. Control tool windows

Here is some practical information about the Camera Control Tool:

1. The Camera Control Tool bar is always on top of other windows.
2. When you minimize the Camera Control Tool bar all open windows will close.
3. It is possible to work with the Camera Control Tool when the camera is online and when the camera is offline.
4. The newer JAI cameras always start up with the last used user area (but for some old models it will start up with the last saved user area.)
5. The Camera Control Tool saves the last used settings (not the user area), which don't have to be the same as for the last saved user area.
6. The setup file 'CameraName.ini' stores all information about camera settings. When the program is started the last settings for the program are loaded from the file 'CameraName.ini'

10.2. Camera Control Tool interface



The Camera Control software consists of the main tool bar and associated tool windows. When each icon in the main tool bar is clicked, the associated window will open. The program is

refreshed after reboot.

The Camera control tool includes an About Window, Communication Window and Camera Control Window.

10.2.1 About Window


The About Window contains a picture of the camera and information about the version of the program, Internet connection to JAI A/S and access to the help documents.

The List box that contains the help documents will list all files, which have the extension .pdf and that are found in the program (default) folder

It is possible to download updated operation manuals from the jai website:

<http://www.jai.com>

The About Window also shows Model Name, Camera ID and User ID. It is possible to edit and save free text in User ID.

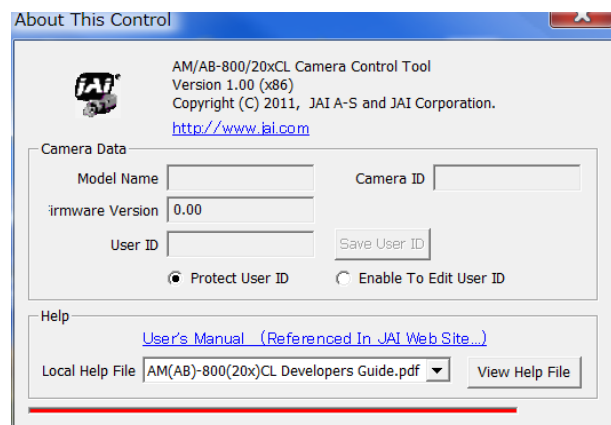


At the bottom of the windows (all windows but the Communication Window) is a colored bar. The bar is red when the Camera Control Tool is not connected to a camera or when the camera is turned off. The bar is green when the Camera Control Tool is connected to a camera and the camera is turned on.

10.2.2 Communication Window

The Communication Window is used to connect the Camera Control Tool with the JAI camera. Depending on the camera there are 2 possible ways to communicate with a JAI camera.

RS-232C

Select the communication port, where the serial cable is connected from the list box in the 'Communication Port' field, or click the 'Auto' button to search for a camera on communication port 1 to 16. The camera control program automatically sends a camera request on every communication port. The user is prompted to use a communication port if a camera answers the request.

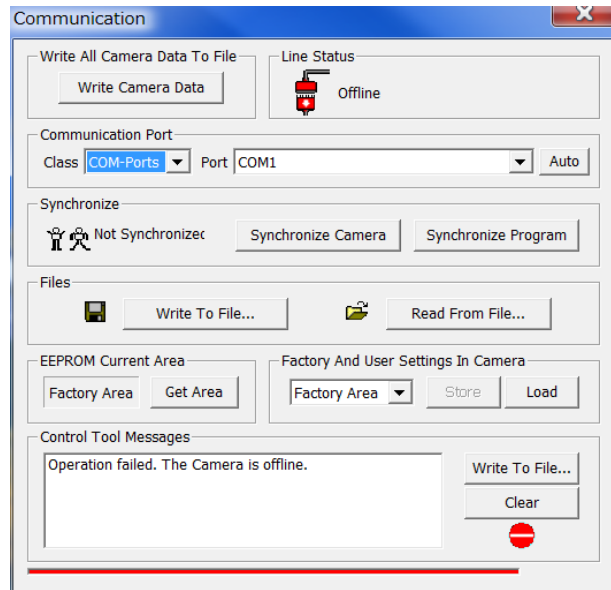


RS-232C and Camera Link

The Communication Window looks a bit different when it is possible to communicate with the camera using Camera Link and RS-232 com port. The Communication area contains 2 list boxes now.

RS-232C Communication

 1. Select 'COM-ports' from the 'CL Manufacturer/COM-ports' list Box.
2. Select the communication port, where the serial cable is connected to the camera from the 'Serial Port' list box or click the 'Auto' button to search for a camera on communication port 1 to 16.




The Serial Port list box and the Auto search button are only active when COM-ports is selected.

Camera Link communication

The 'CL Manufacturer/COM-ports' list box also contains DLL file names (or frame grabber names) for all Camera Link frame grabbers that are installed in the PC. This is done by using a DLL file called "clserial.dll" to upload all frame grabber DLLs that are found in the PC.

 Just select the option for the frame grabber that is installed in the PC.



Auto Search

Click the auto button to search for a camera on communication port 1 to 16. The camera control program automatically sends a camera request on every communication port. The user is prompted to use a communication port if a camera answers the request. This button is only used for RS-232 communication.

Off/On-line Mode

The Camera Control Tool Application can run offline (without a camera attached) and all functions are fully functional in offline mode.

Offline mode is indicated in the Communication Window, where a status field with graphic and text indicates the on/offline status.

Changing the selected communication port (from the Communication Window) changes the online/offline status. If a camera is found on the selected communication port the application runs online otherwise offline.



Changing the settings in the application will automatically update the camera settings when the application is online.

If the application loses connection with the camera it will automatically go to offline mode and it is indicated in the Communication Window.

Synchronize program and camera

The Camera Control software has the ability to synchronize either the camera or the program. Click Synchronize camera to write all settings from the program to the camera or click the Synchronize program to load all settings from the camera to the program.



Files

When clicking the Write to File or Read from File button, the user is prompted for a file using a standard file dialog. New files are created if they do not already exist.

Files for camera settings have the “.cam” extension. Information about the communication port is not stored in the files. All settings are automatically sent to the camera when a file has been loaded (if the camera is online).

Factory and User Settings

Use the Store button to store the current camera settings into the user settings area in EEPROM. Current camera settings are not saved when the camera is turned off. To save current camera settings you have to save them to the available user areas.

Use the Load button to restore previously saved camera settings from either the Factory or the User EEPROM area.

Write All Camera Data to File

 
Click the “Write Camera Data” button to save all camera settings into a text file. The information that can be saved is:

Model Name, Camera ID, User ID, Firmware Version, Current Settings,




EEPROM Current Area

Click the ‘Get Area’ button to read the power up settings area number.




10.2.3 Camera Control Window


10.2.3.1 Exposure Control

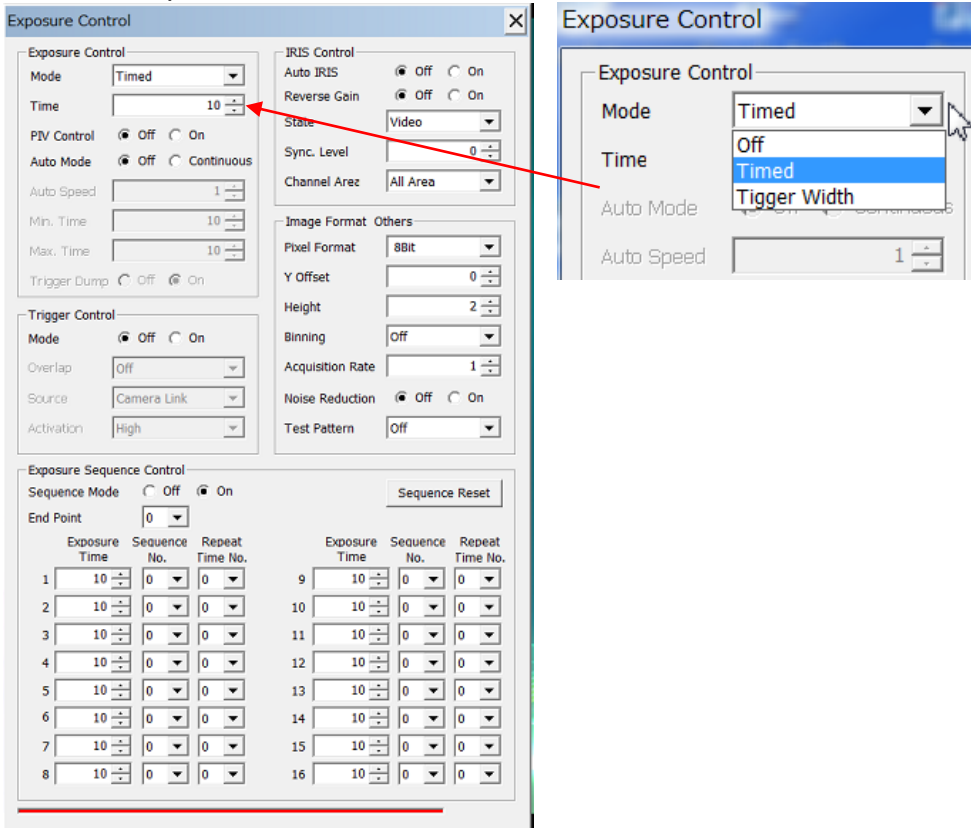




10.2.3.2 Gain Control

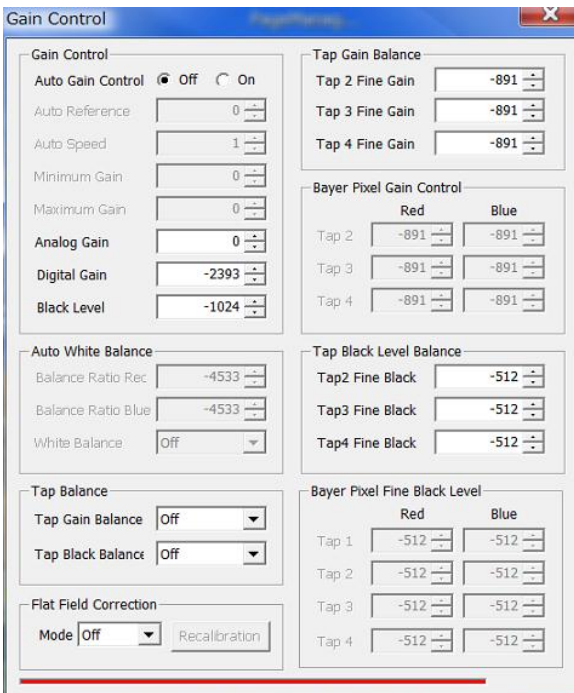

10.2.3.3 Blemish Control

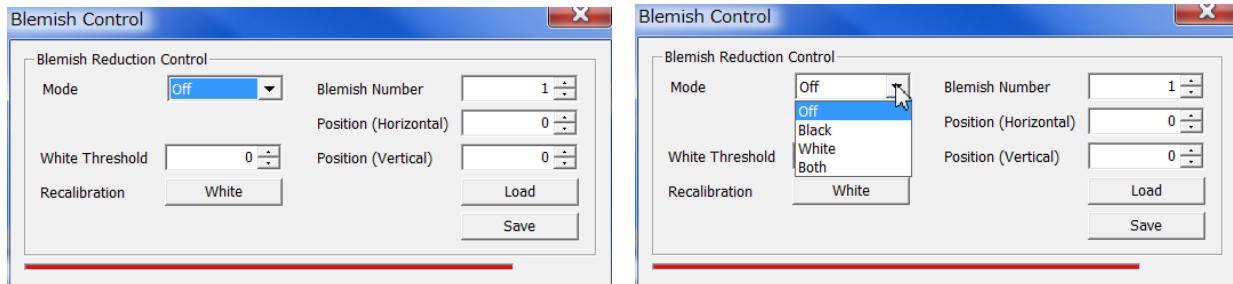

 When “Open LUT table” is clicked, the left side window will open, for example for blue channel.

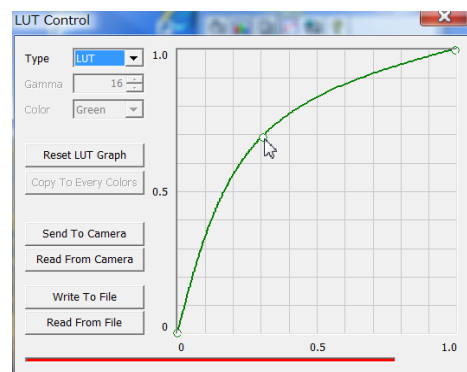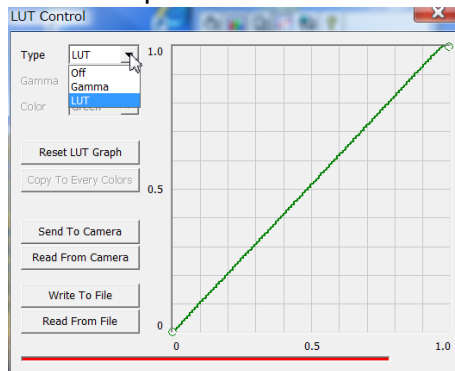

12. Specifications

12.1 Spectral response

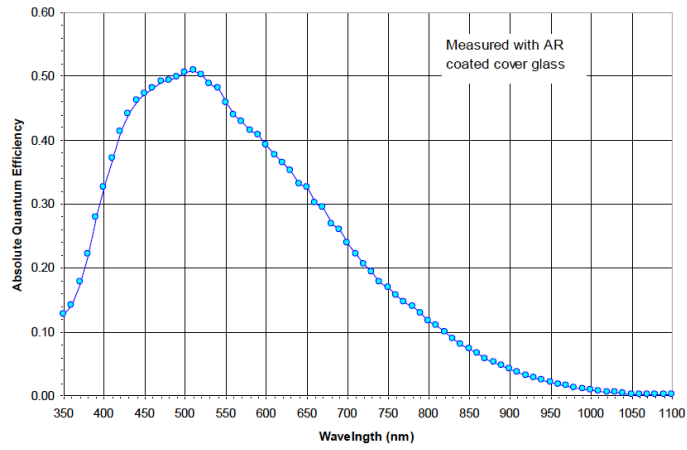


Fig. 49 Spectral response (AM-201CL)

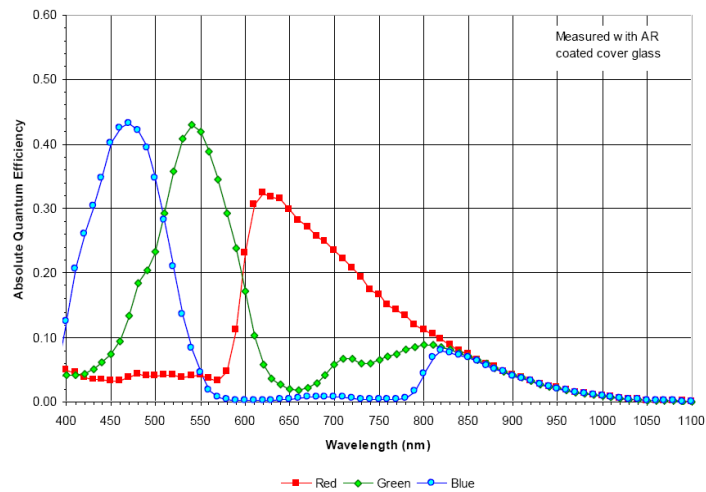


Fig.50 Spectral response (AB-201CL)

AM-201CL / AB-201CL

12.2 Specifications table

Specifications		AM-201CL	AB-201CL
Scanning system		Progressive scan, 4 taps	
Synchronizing system		Internal	
Image sensor		2/3 inch Monochrome interline CCD	2/3 inch Bayer color interline CCD
Sensing area		10.56 (h) x 5.94 (v) mm 12.1 mm diagonal	
Cell size		5.5 (h) x 5.5 (v) μ m	
Active pixels (for output)		1920 (h) x 1080 (v)	1920 (h) x 1080 (v)
Pixel clock(sensor)		40 MHz	
Horizontal (Camera Link)		35.398 KHz (1H=28.25 μ s) (2260clocks per line) (Pixel clock 80MHz)	
Vertical		Total lines 1102 (Effective 1080)	
Frame rate (Full resolution) 2 tap output	Timed Trigger OFF (Continuous)	64.2fps (15.56ms)	Bayer output 64.2fps (15.56ms)
	Timed Trigger ON	64.2fps (15.56ms)	Bayer output 64.2fps (15.56ms)
	Trigger Width	64.2fps (15.56ms)	Bayer output 64.2fps (15.56ms)
	PIV	32.2fps (31.13ms)	Bayer output 32.2fps (31.13ms)
	Pre-Dump	64.2fps +Fast dump + Exposure time	Bayer output 64.2fps +Fast dump + Exposure time
Frame rate (Full resolution) 1 tap output	Timed Trigger OFF (Continuous)	32.2fps(31.13ms)	Bayer output /RGB color output 32.2fps (31.13ms)
	Timed Trigger ON	32.2fps(31.13ms)	Bayer output /RGB color output 32.2fps (31.13ms)
	Trigger Width	32.2fps(31.13ms)	Bayer output /RGB color output 32.2fps (31.13ms)
	PIV	16.1ps(62.1ms)	Bayer output /RGB color output 16.1fps (62.1ms)
	Pre-Dump	32.2fps +Fast dump + Exposure time	Bayer output /RGB color output 32.2fps +Fast dump + Exposure time
Image Format	Full resolution	1920(h) x 1080(v)	Bayer 1920(h) x 1080(v) RGB 1920(h) x 1080(v)
	Binning (h x v)	1 x 2 1920(h) x 540(v) 2 x 1 960(h) x 1080(v) 2 x 2 960(h) x 540(v)	-
	AOI	Height 1 line / step Offset Y 1 line / step	Height 2 line / step Offset Y 2 line / step
		Note: number of horizontal pixels cannot be changed.	
Sensitivity on sensor (minimum)		0.21 Lux (Max. gain, Shutter OFF, 50% video, w/IR cut filter) 3200K	0.42 Lux (Max. gain, Shutter OFF,50% Green,) 4600K
S/N ratio		More than 57 dB (0dB gain, CCD output=300mV)	
Digital Video output Camera Link	Pixel format	1 tap, 2 taps selectable	
	Pixel clock	80 MHz	
	Pixel bit depth	8-bit, 10-bit, 12-bit	BAYER 8-bit, 10-bit, 12-bit RGB 8-bit per color
Iris video output		Analog, 0.7 V p-p with 0.3V H.sync	
Sync output		Camera Link : FVAL, LVAL, DVAL, EEN Hirose 12-pin: XEEN, 4V p-p (No termination)	

Acquisition frame rate		Frame rate can be varied from 64.2Hz to 0.5Hz	
Exposure Control (Trigger)	OFF		
	Timed	10 μ s to 2s(if frame line number is changed), 1 μ s step	
	Trigger width	Binning OFF / 2 x 1 Binning 1 x 2 / 2 x 2	56.5 μ s(2L) to 2 sec. 61.6 μ s(2L) to 2 sec.
	PIV		
	Pre-dump		
Trigger Control	Source	Line 0=Camera Link CC1 or Line1=Hirose 12P 10pin	
	Activation	Rising edge or falling edge Level High or Level Low (if trigger width is used)	
Gain		Manual/Auto : -3dB to +24 dB (1 Step 0.0359 dB) Fine gain (Digital gain) (1step=0.00012 times)	Manual/Auto : 0dB to +24 dB (1 Step 0.0359 dB) Fine gain (Digital gain) (1step=0.00012 times)
White balance		-	OFF: Manual ON: One push white balance Range: 3200K to 9000K
Black level		32 LSB at 10-bit output, 0 LSB to 255 LSB can be changed, 1 step is 0.25dB (at 10-bit output)	
LUT		OFF: γ =1.0, ON= 256 points can be set	
Gamma		0.45 to 1.0 can be set, Adjusting step is 0.05	
Flat Field Compensation		Compensated by 128 x 128 pixels block	
Blemish Compensation (Bright)		Built in, maximum 64 pixels for dark and bright compensation per 1 tap (note: black compensation is only by factory preset)	
Color interpolation		-	3 x 3 interpolation matrix
Test pattern		OFF/Black-white/Gray H-ramp/ Gray V-ramp/white(100%)	OFF/Color bar/Gray H-ramp / Gray V-ramp /White(100%)
Temperature sensor		-55 to +125°C (measuring range), resolution is 0.0625°C	
Serial communication		Camera Link or Hirose 12-pin	
Power		DC+12V to +24V \pm 10%, 7.8W (at normal operation, DC+12V)	
Lens mount		C mount The rear protrusion on C mount lens must be less than 10mm.	
Flange back		17.526 mm, tolerance 0 to -0.05 mm	
Sensor alignment		X and Y axis: \pm 0.1 mm (at center)	
Optical filter		- Protection glass only	Optical low pass filter
Operating temperature		-5°C to +50°C	
Humidity		20 - 80% non-condensing	
Storage temp/humidity		-25°C to +60°C/20% to 80 % non-condensing	
Vibration		10G (20Hz to 200Hz, XYZ)	
Shock		70G	
Regulatory		CE (EN61000-6-2 and EN61000-6-3), FCC part 15 class B, RoHS, WEEE	
Size		55 x 55 x 69 mm (W x H x D)	
Weight		280g	

Note1): Approximately 5 minutes pre-heating is required to get the mentioned specifications.

Note2): The above specifications are subject to change without notice.

Appendix

1. Precautions

Personnel not trained in dealing with similar electronic devices should not service this camera. The camera contains components sensitive to electrostatic discharge. The handling of these devices should follow the requirements of electrostatic sensitive components.

Do not attempt to disassemble this camera.

Do not expose this camera to rain or moisture.

Do not face this camera towards the sun, extreme bright light or light reflecting objects.

When this camera is not in use, put the supplied lens cap on the lens mount.

Handle this camera with the maximum care.

Operate this camera only from the type of power source indicated on the camera.

Power off the camera during any modification such as changes of jumper and switch setting.

2. Typical Sensor Characteristics

The following effects may be observed on the video monitor screen. They do not indicate any fault of the camera, but do associate with typical sensor characteristics.

V. Aliasing

When the CCD camera captures stripes, straight lines or similar sharp patterns, jagged edges may appear on the monitor.

Blemishes

All cameras are shipped without visible image sensor blemishes.

Over time some pixel defects can occur. This does not have a practical effect on the operation of the camera. These will show up as white spots (blemishes).

Exposure to cosmic rays can cause blemishes to appear on the image sensor. Please take care to avoid exposure to cosmic rays during transportation and storage. It is recommended using sea shipment instead of air flight in order to limit the influence of cosmic rays on the camera. Pixel defects/blemishes also may emerge due to prolonged operation at elevated ambient temperature, due to high gain setting, or during long time exposure. It is therefore recommended to operate the camera within its specifications.

Patterned Noise


When the sensor captures a dark object at high temperature or is used for long time integration, fixed pattern noise may appear on the video monitor screen.

3. Caution when mounting a lens on the camera

When mounting a lens on the camera dust particles in the air may settle on the surface of the lens or the image sensor of the camera. It is therefore important to keep the protective caps on the lens and on the camera until the lens is mounted. Point the lens mount of the camera downward to prevent dust particles from landing on the optical surfaces of the camera. This work should be done in a dust free environment. Do not touch any of the optical surfaces of the camera or the lens.


4. Caution when mounting the camera

When you mount the camera on your system, please make sure to use screws of the recommended length described in the following drawing. Longer screws may cause serious damage to the PCB inside the camera.

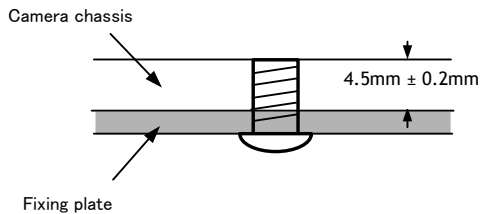

Mounting the camera to fixing plate

If you mount the tripod mounting plate, please use the provided screws.

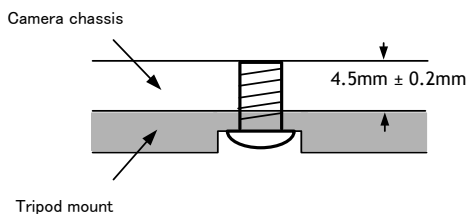

Attaching the tripod mount

5. Caution for cleaning CCD and Low Pass Filter

If you find dust on the surface of the CCD and/or Low Pass Filter, please clean using a small blower such as those used for photographic equipment. Please do not use compressed air as moisture in the compressed air will cause dust to stick to the surface of CCD and/or Low Pass Filter. After using a blower, if dust is still not removed, please consult with JAI technical support.

6. Exportation

When exporting this product, please follow the export regulation of your own country.

7. References

1. This manual can and datasheet for AM-201CL / AB-201CL can be downloaded from www.jai.com
2. Camera control software can be downloaded from www.jai.com



User's Record

Camera type: AM-201CL / AB-201CL

Revision:

Serial No.

Firmware version.

For camera revision history, please contact your local JAI distributor.

User's Mode Settings.

User's Modifications.

Company and product names mentioned in this manual are trademarks or registered trademarks of their respective owners. JAI A-S cannot be held responsible for any technical or typographical errors and reserves the right to make changes to products and documentation without prior notification.

Europe, Middle East & Africa	Asia Pacific	Americas
Phone +45 4457 8888	Phone +81 45 440 0154	Phone (toll-free) +1 800 445 5444
Fax +45 4491 3252	Fax +81 45 440 0166	Phone +1 408 383 0300

Visit our web site at www.jai.com



See the possibilities

